


步骤一
Step 1


安装龙骨。
Install the joists.

型材 model	间距A span A
 方孔 Square	350 mm
 圆孔 Round	400 mm
 实心 Solid	450 mm

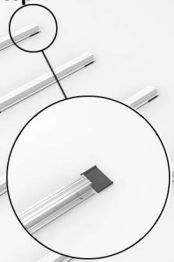


步骤二
Step 2

安装第一块地板时，先用螺钉固定单边扣在龙骨端头。
When install the first decking board, fix the side clips onto the joists first.

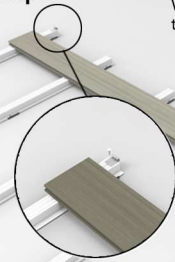

步骤三
Step 3

将扣件A、B牙端卡进地板的侧槽中。只在每块地板中间放扣件B，其余均放扣件A。
Insert the toothed side of clips into the side channel of decking board. Clip B should be insert only in the middle of each decking board and then use the clip A for the rest.

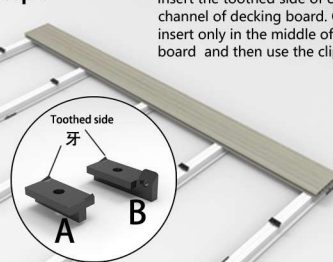


步骤四
Step 4

将扣件A、B牙端卡进地板的侧槽中。只在每块地板中间放扣件B，其余均放扣件A。
Insert the toothed side of clips into the side channel of decking board. Clip B should be insert only in the middle of each decking board and then use the clip A for the rest.



步骤五
Step 5

放上另一块地板。板与板延长时，需留缝5mm。
Put the other decking board. If the boards need to extend, need to leave a 5mm gap between them.

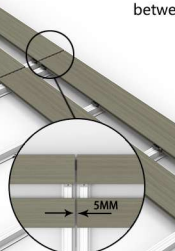

步骤六
Step 6

用螺钉从上孔锁紧扣件，重复以上步骤三到六。
Screw the clips from top to lock the decking board tight to the joists, then repeat step 3 to step 6.

