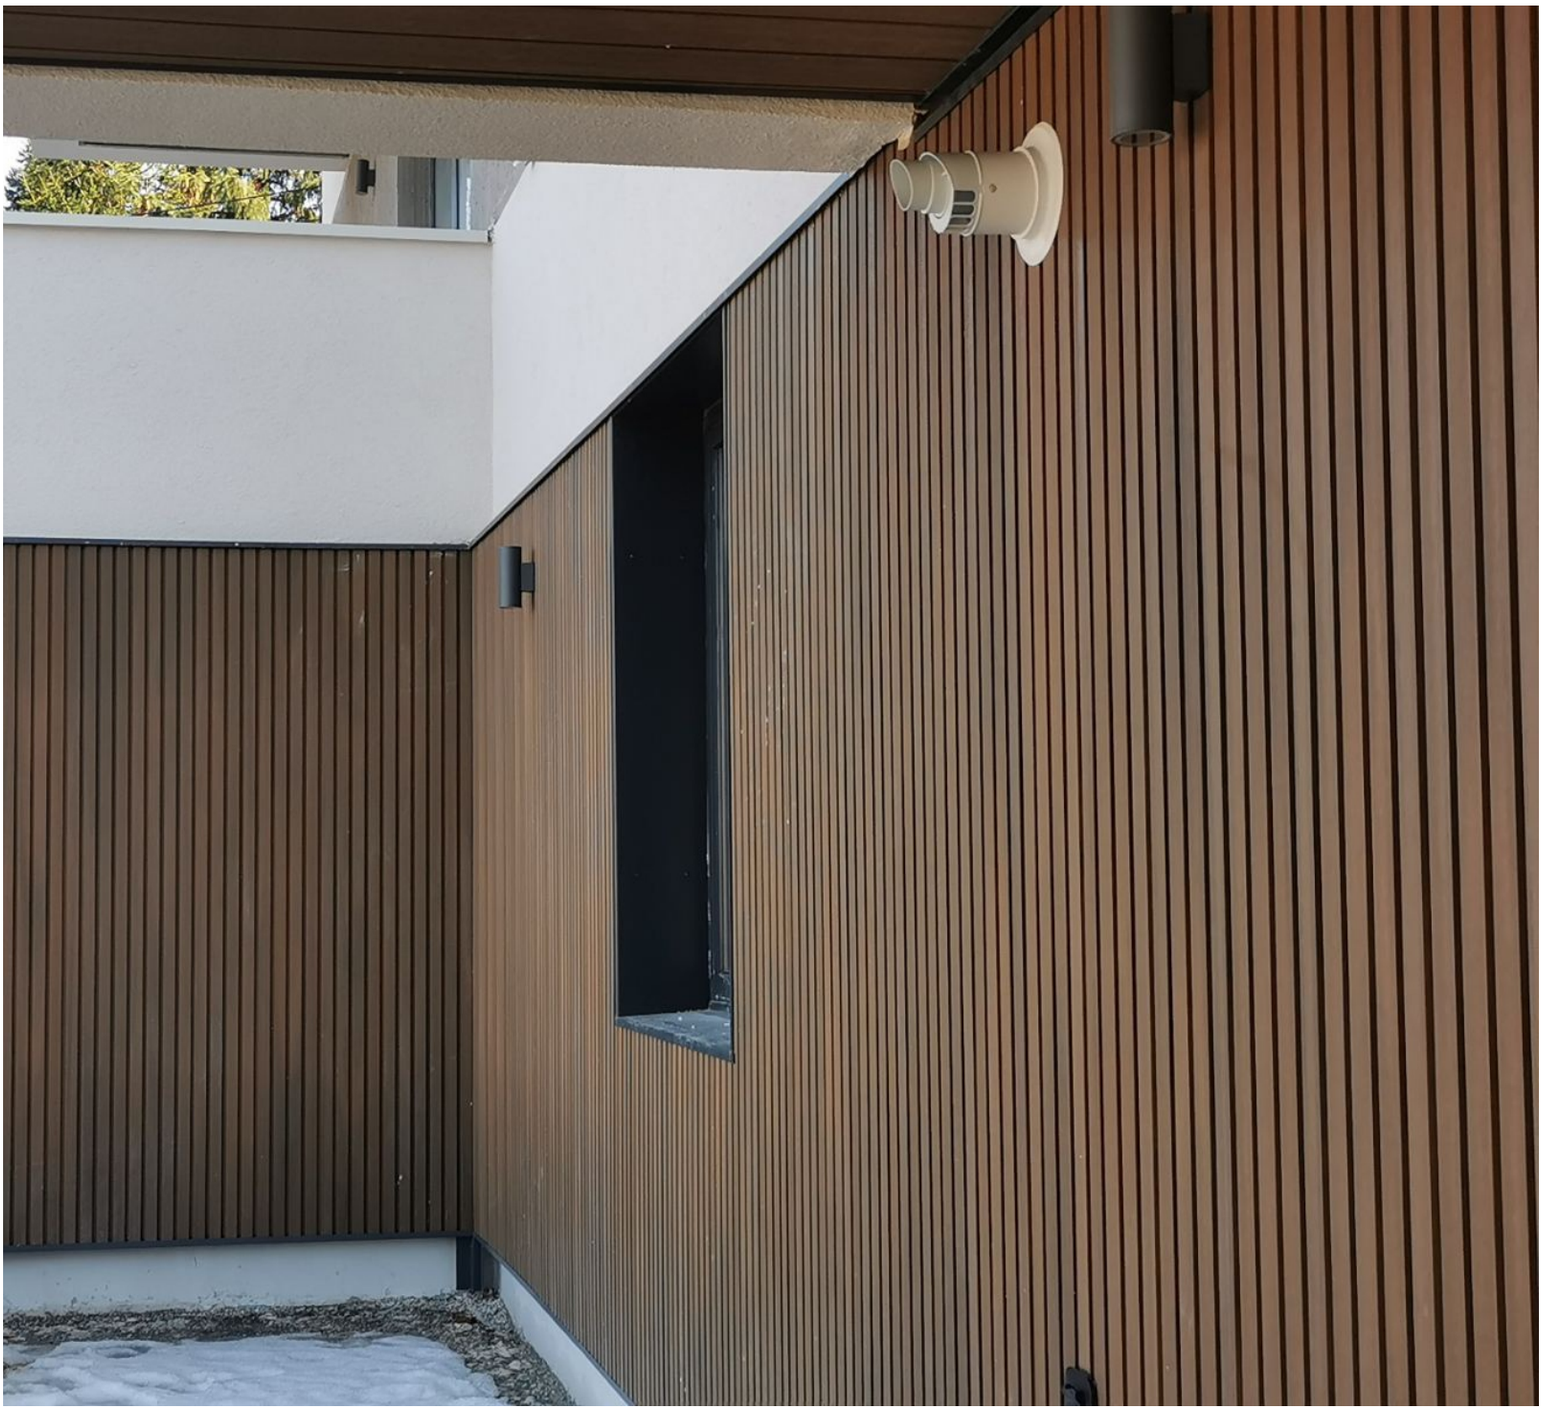

Installation of Slat Wall Cladding

External Wall Cladding Installation Guide

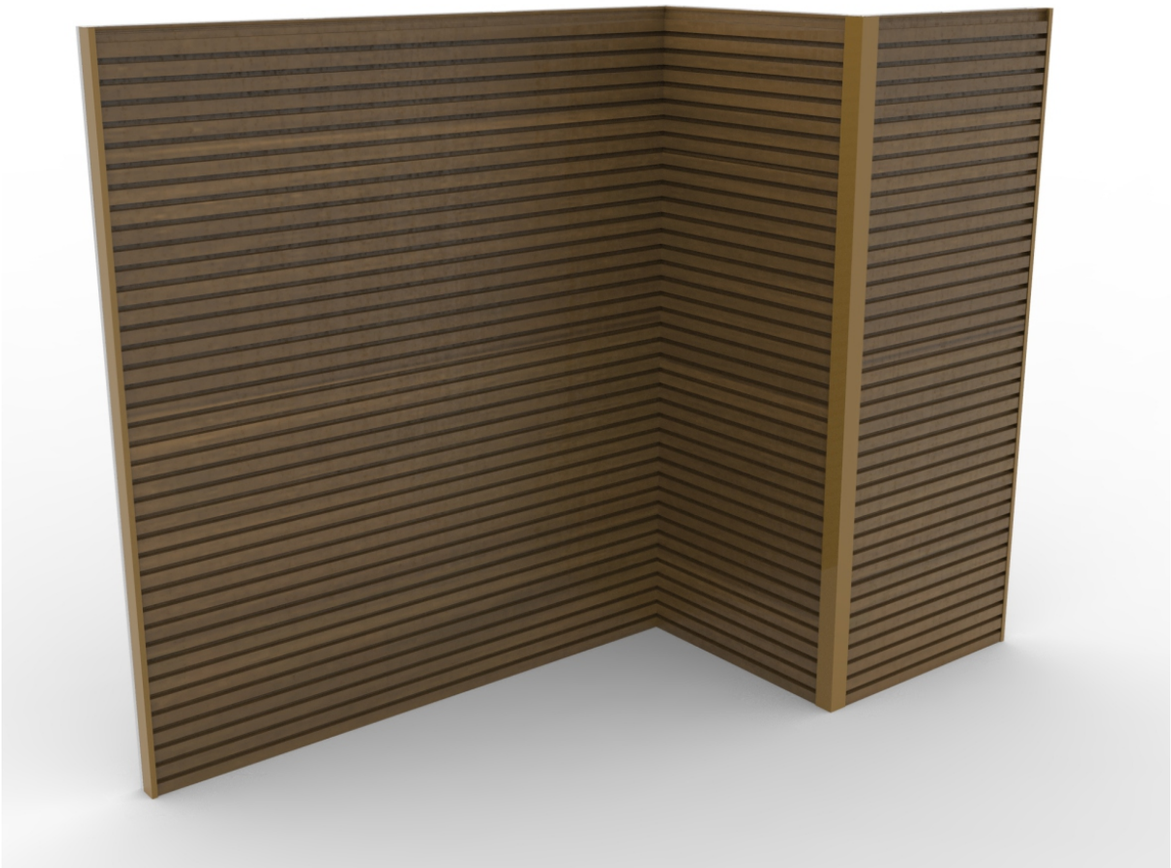

Tools

Pencil

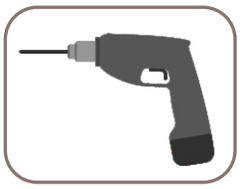

electric drill

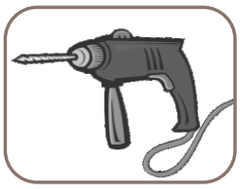

percussion drill

hammer

spirit level

mitre saw

Accessories

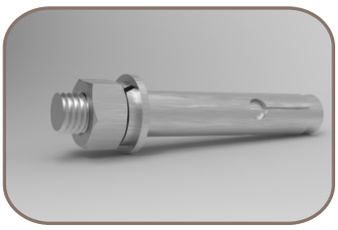

expansion screws

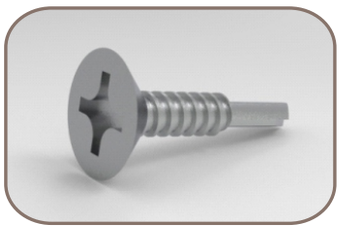

screws

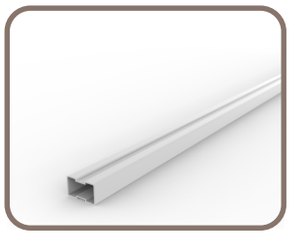

Joist MJ-AL

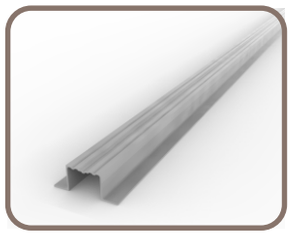

Joist AL 02

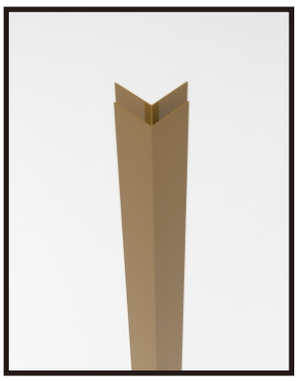

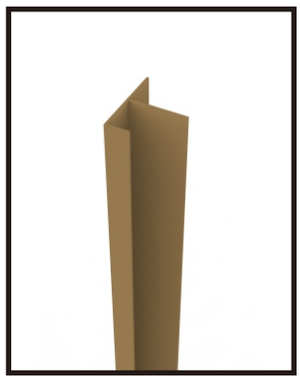

STEP 1 Install the aluminum joist Al02

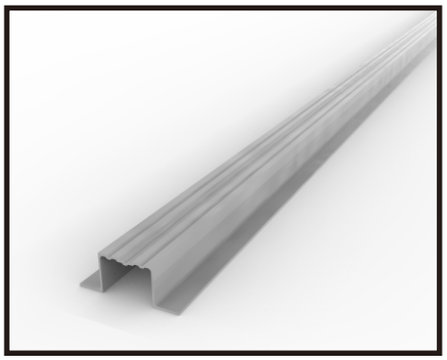

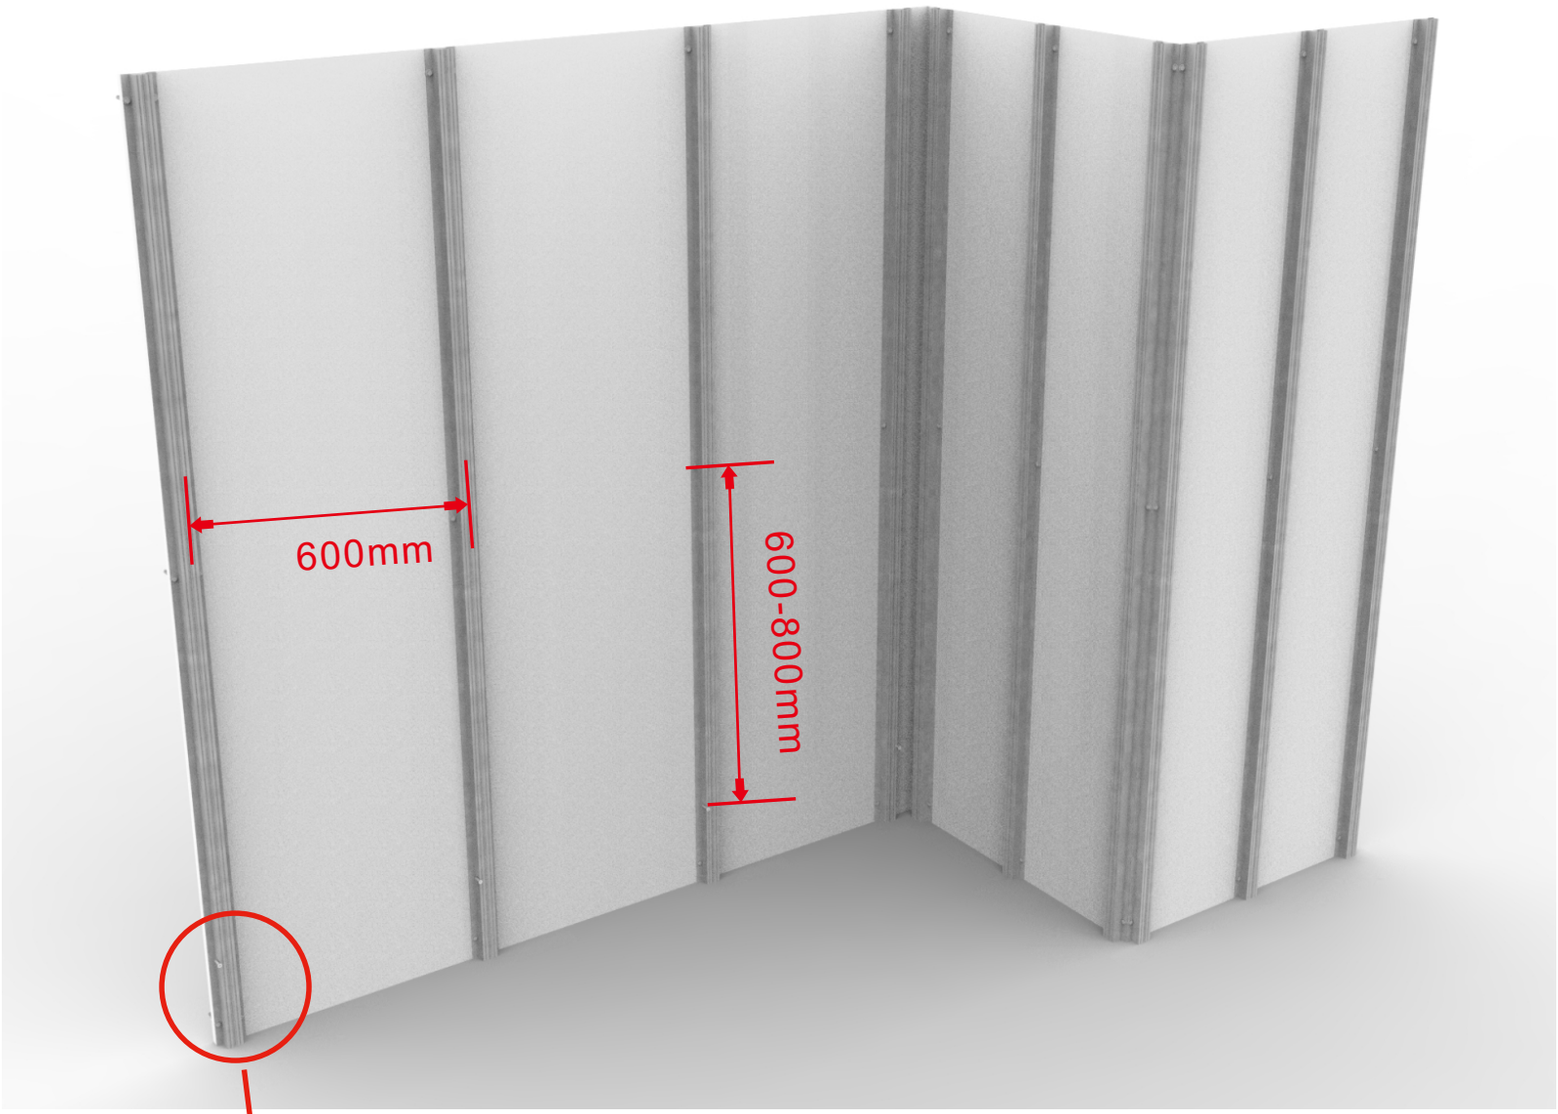

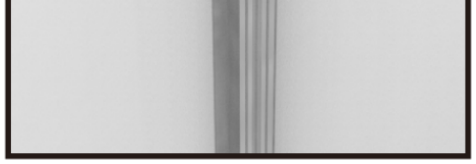

STEP 2 Install the aluminum joist MJ-AL

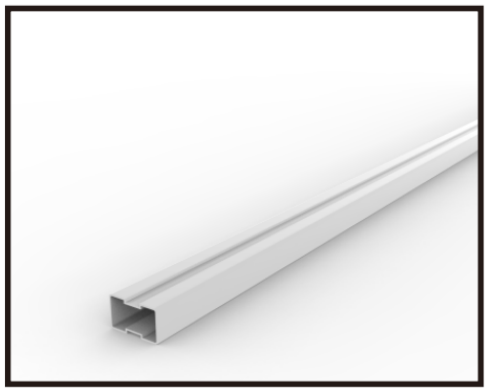

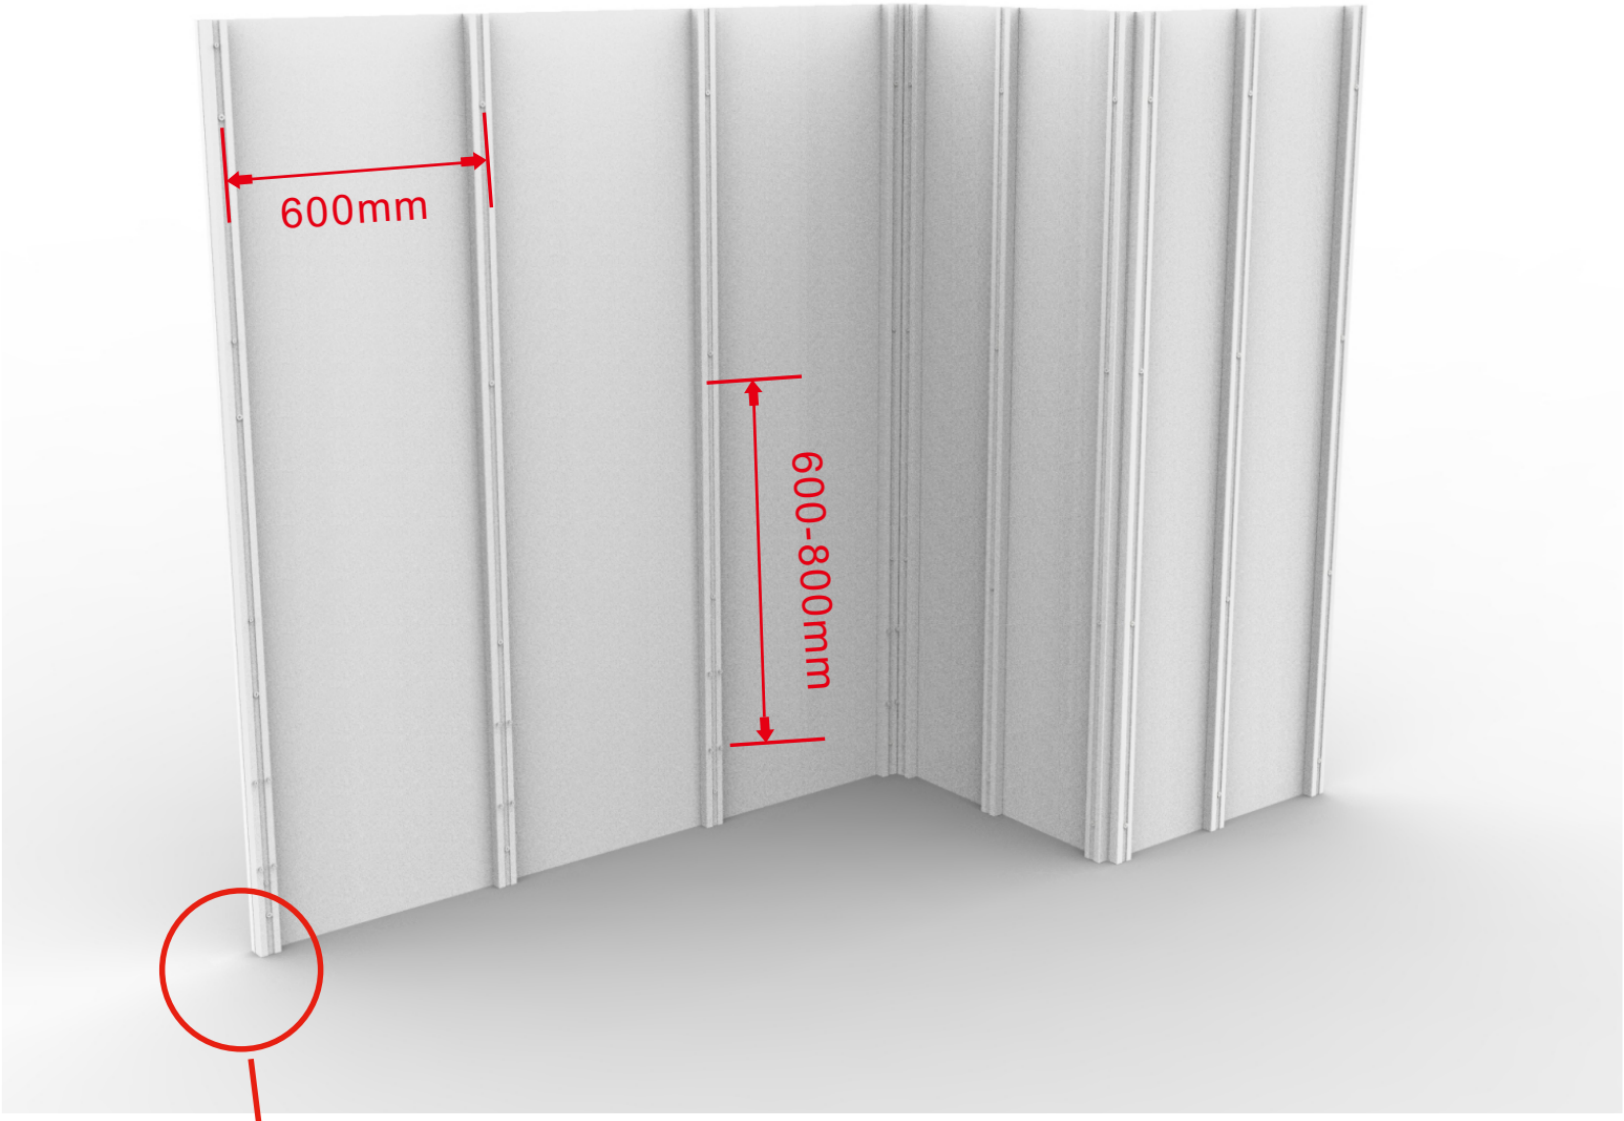

Step 3 Cut and fix the co-extrusion corner trim SC01

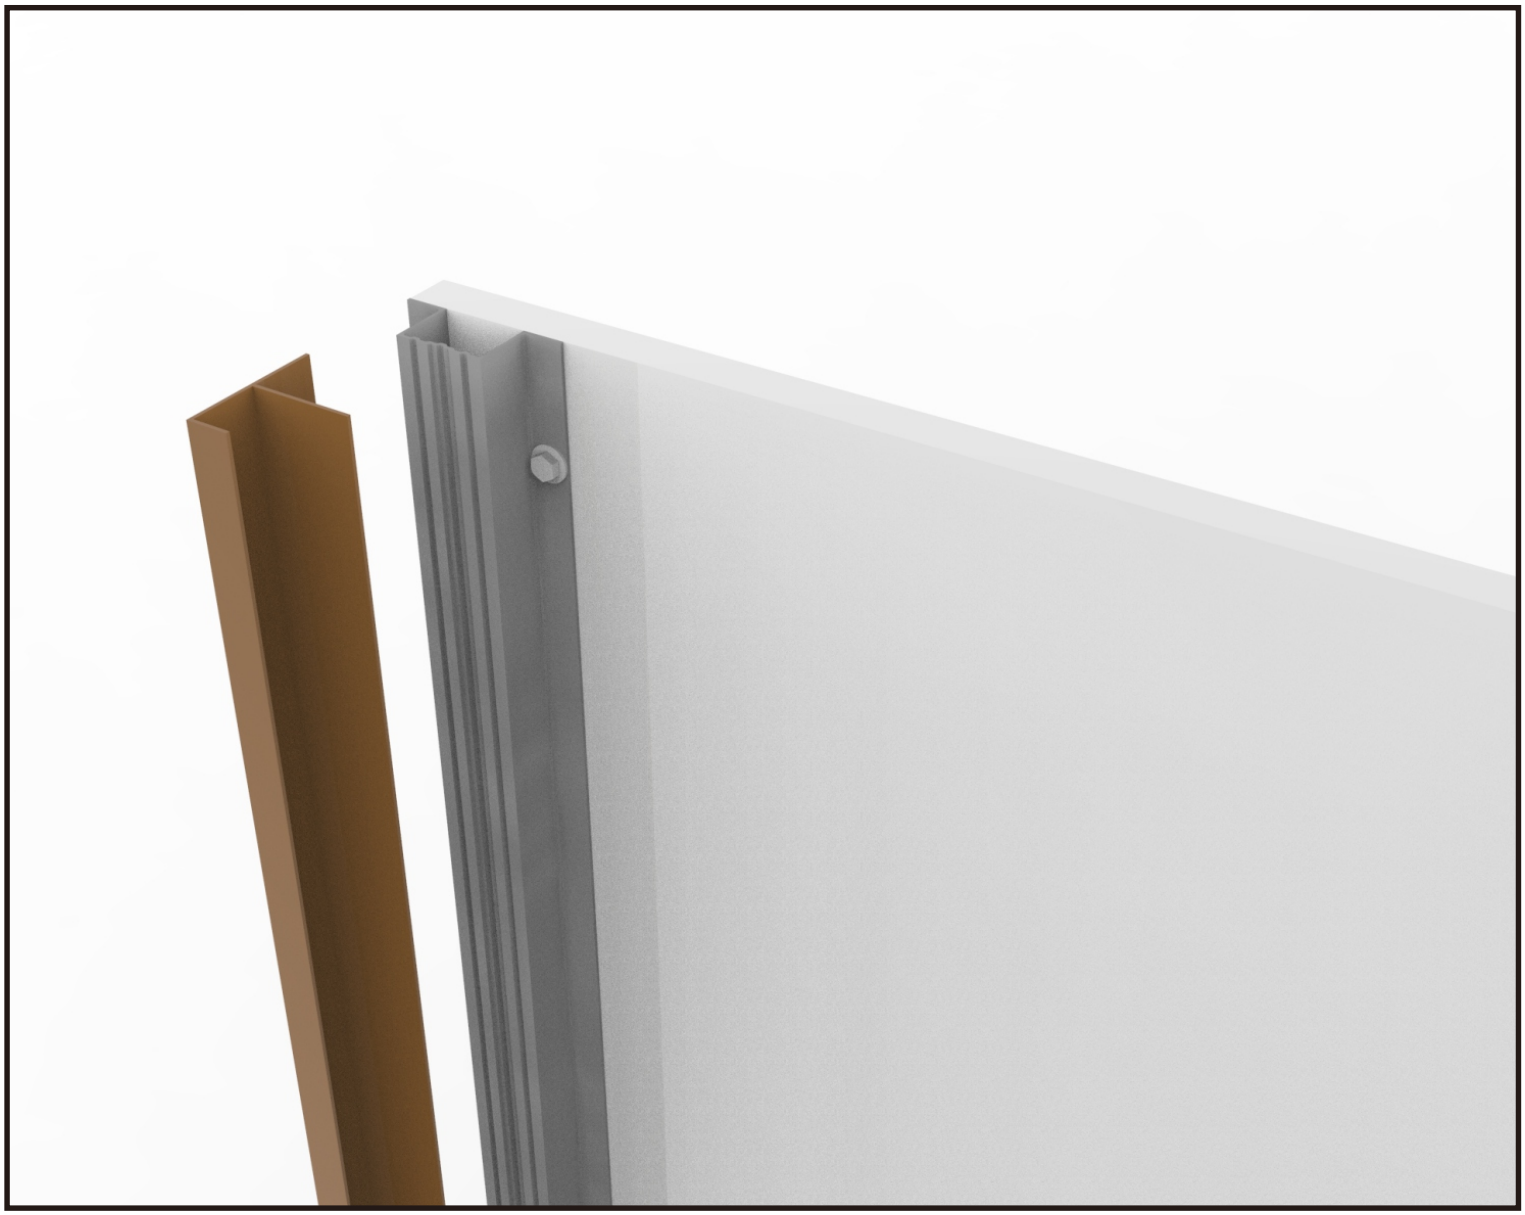

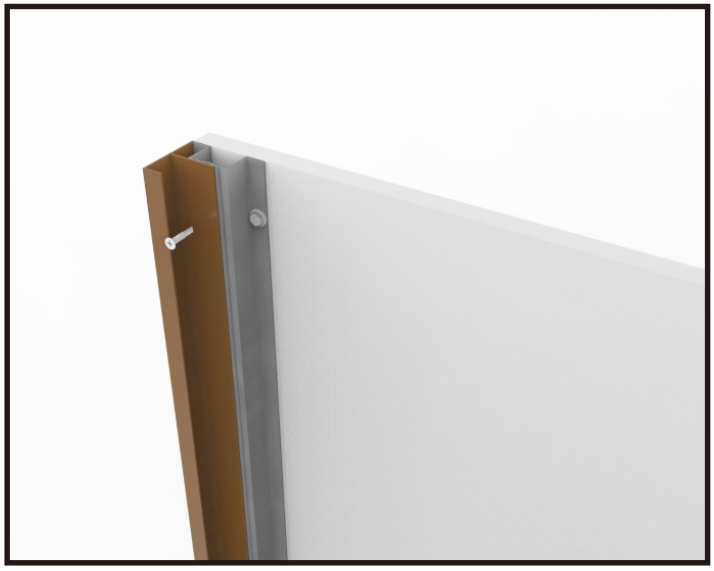

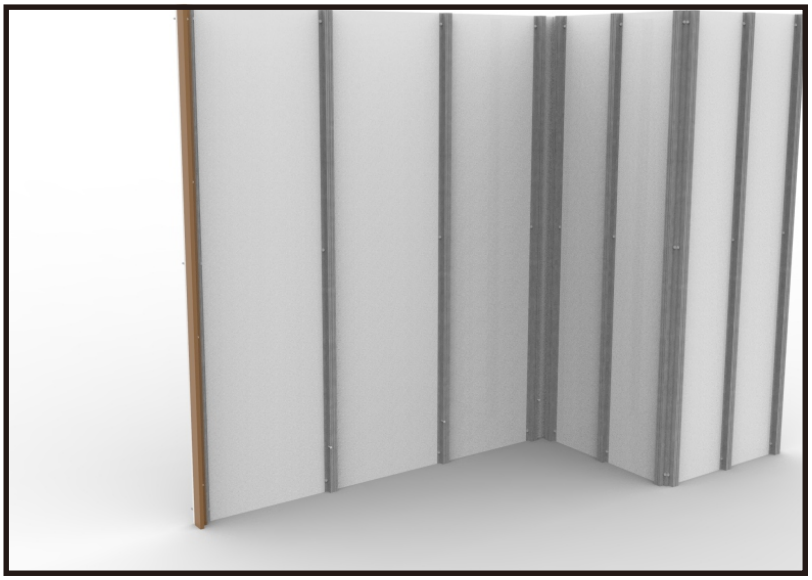

Step 4 Step 2-B Fix the aluminum corner trim AF01

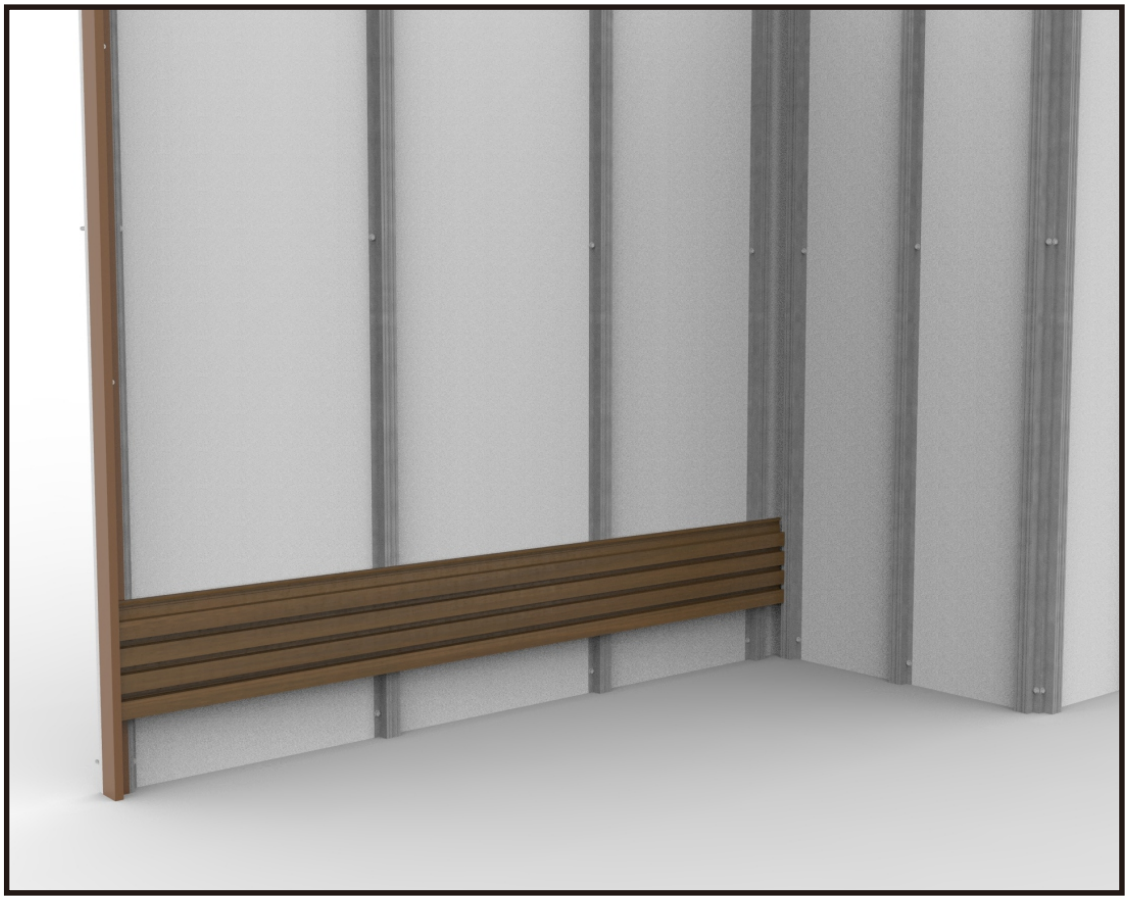

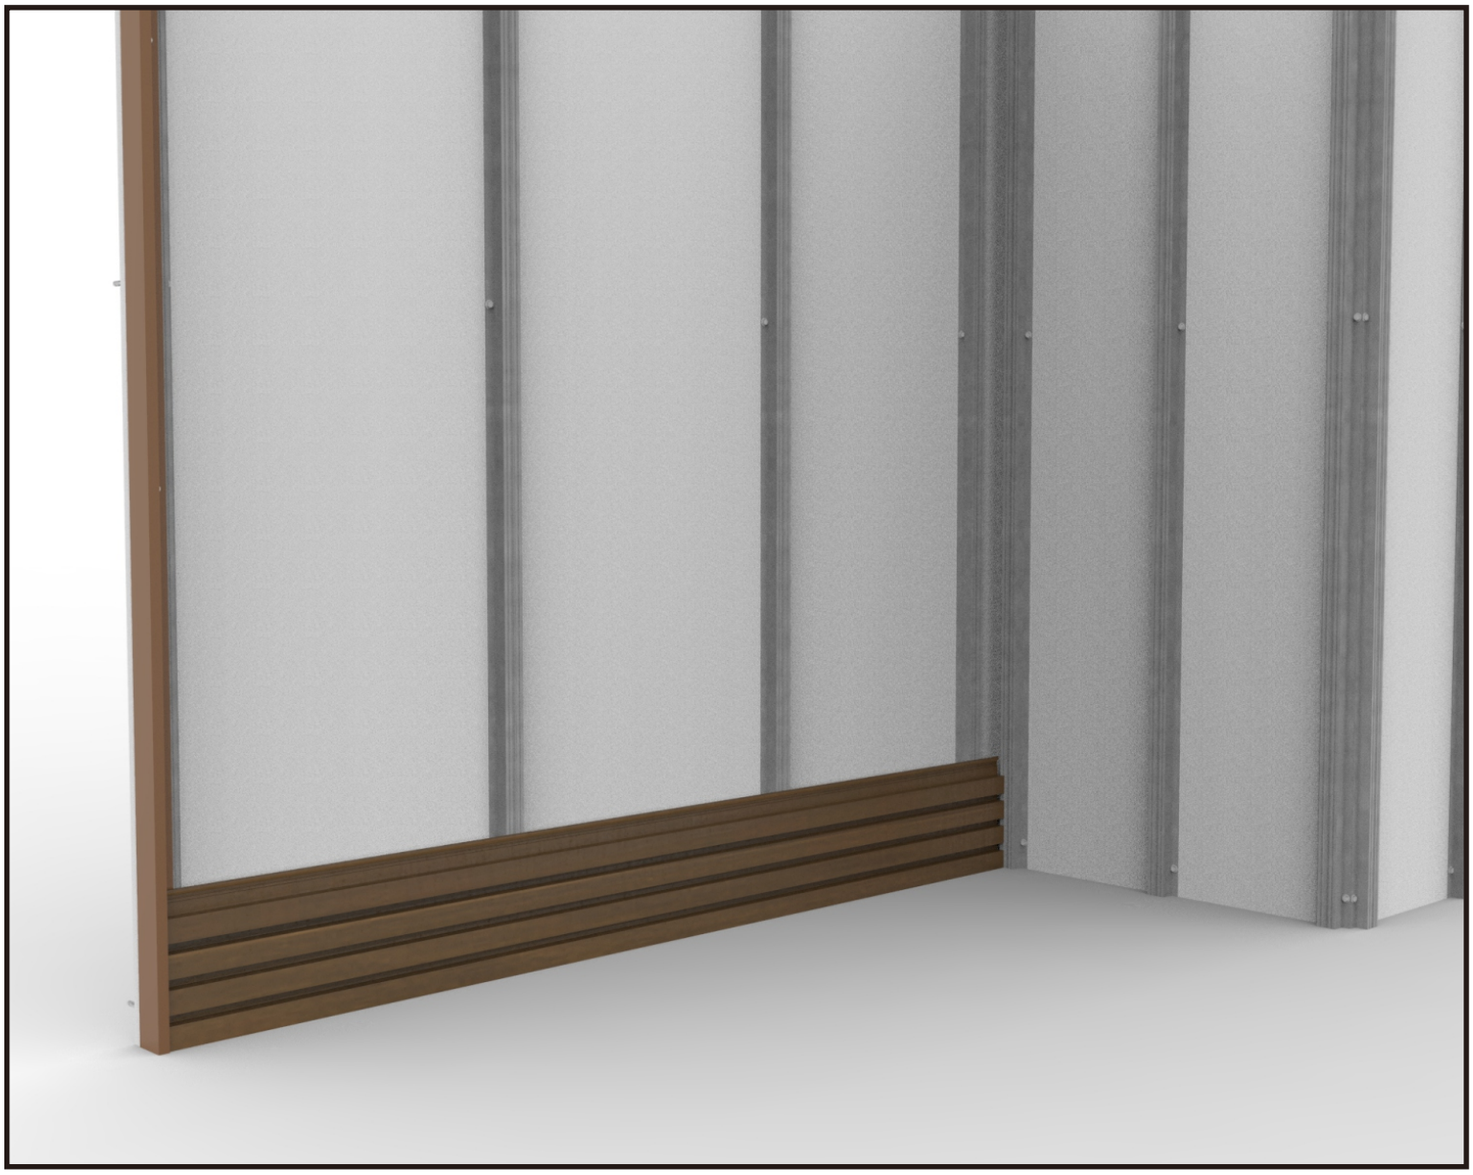

STEP 5 Install the wall cladding penel

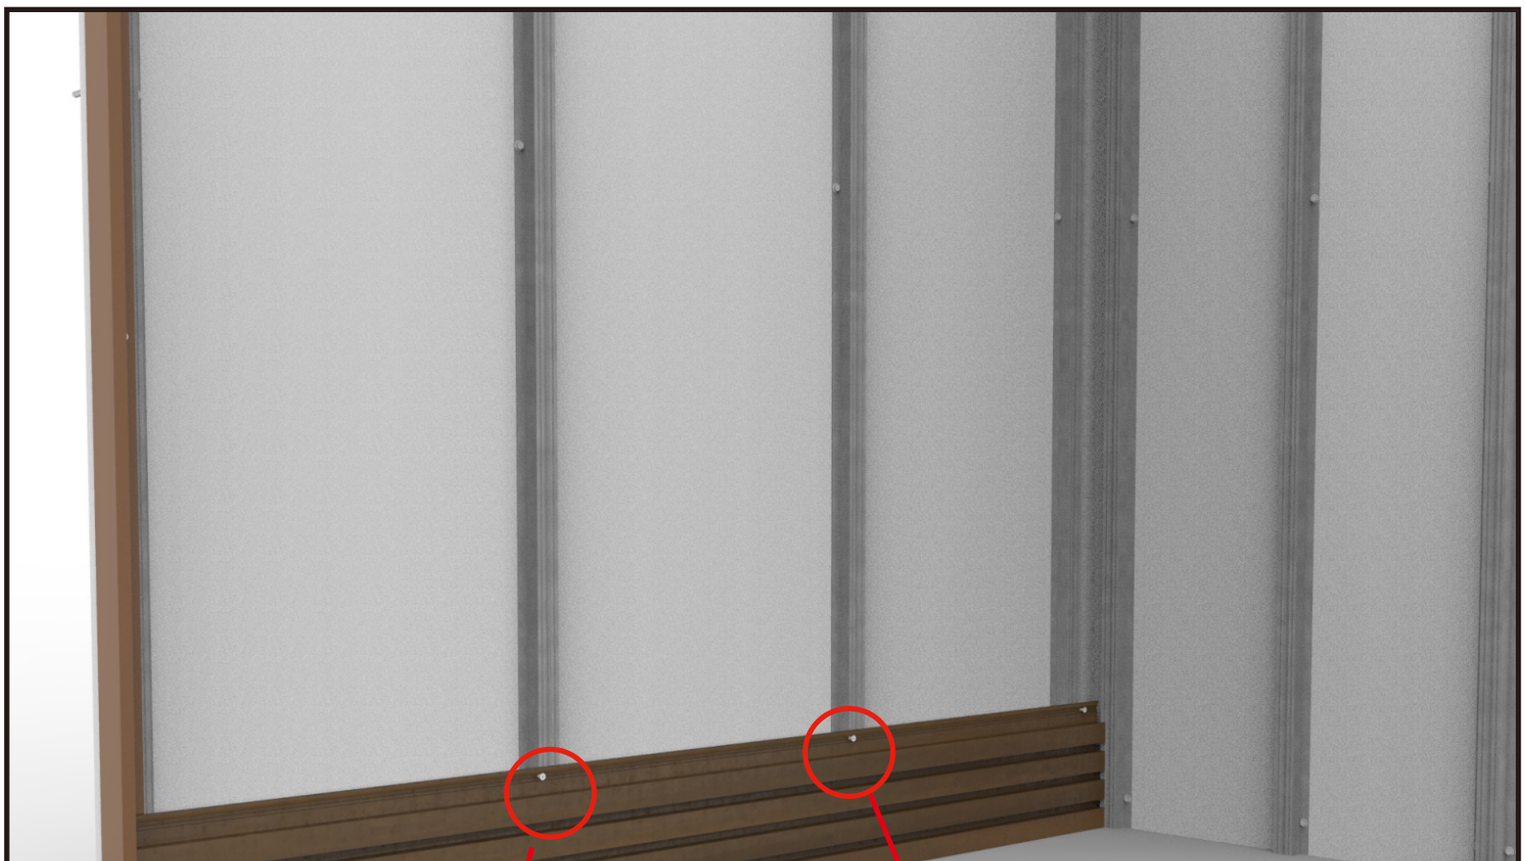

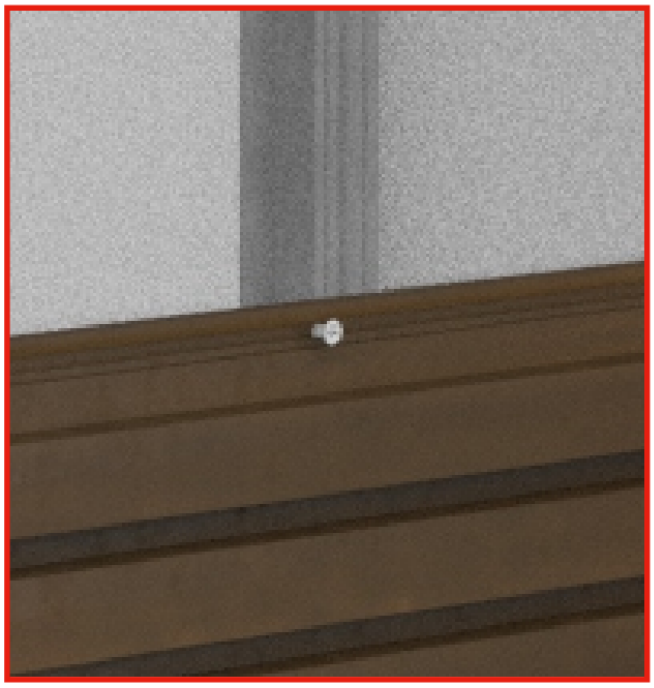

STEP 6 Install the wall cladding penel

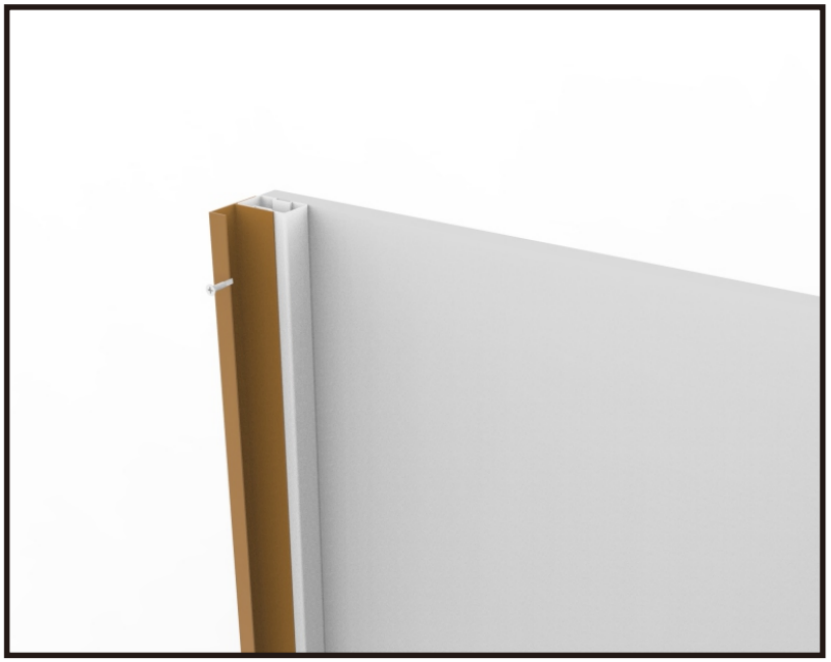

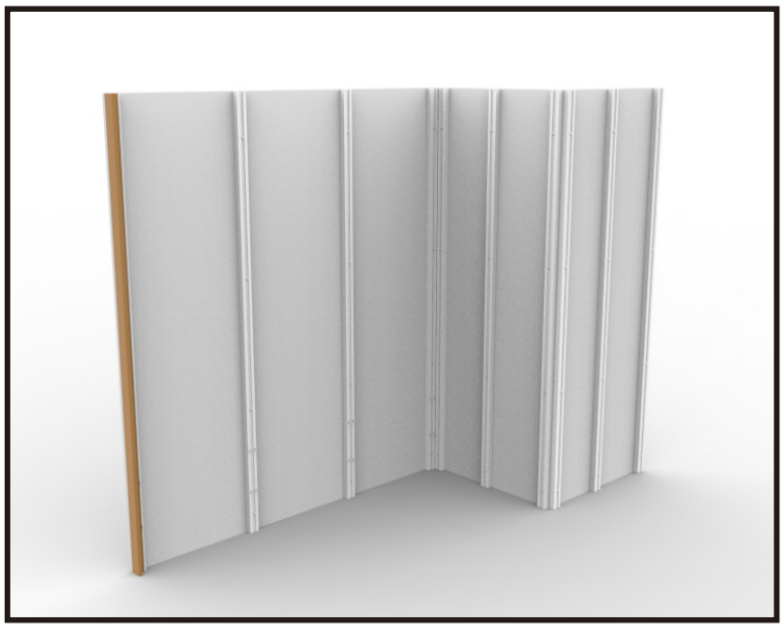

STEP 7 Fixing wall cladding by screws

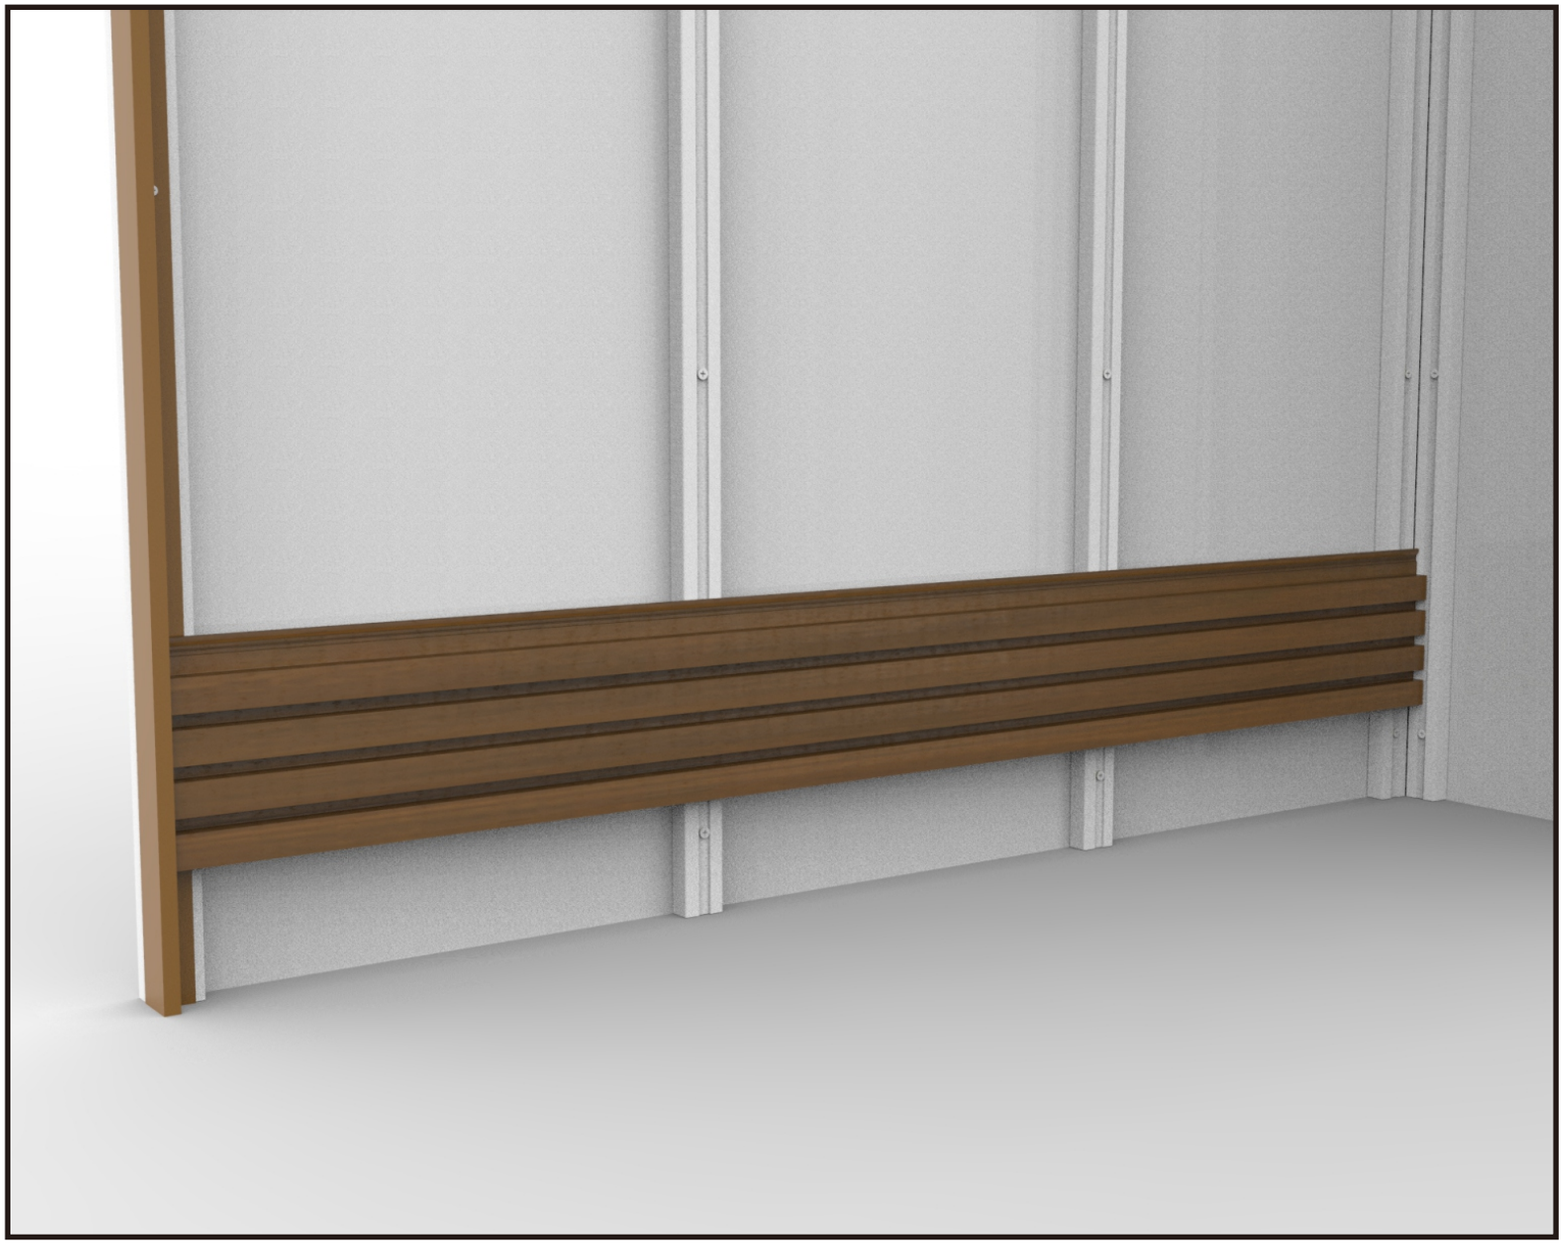

STEP 8 Fixing wall cladding by screws

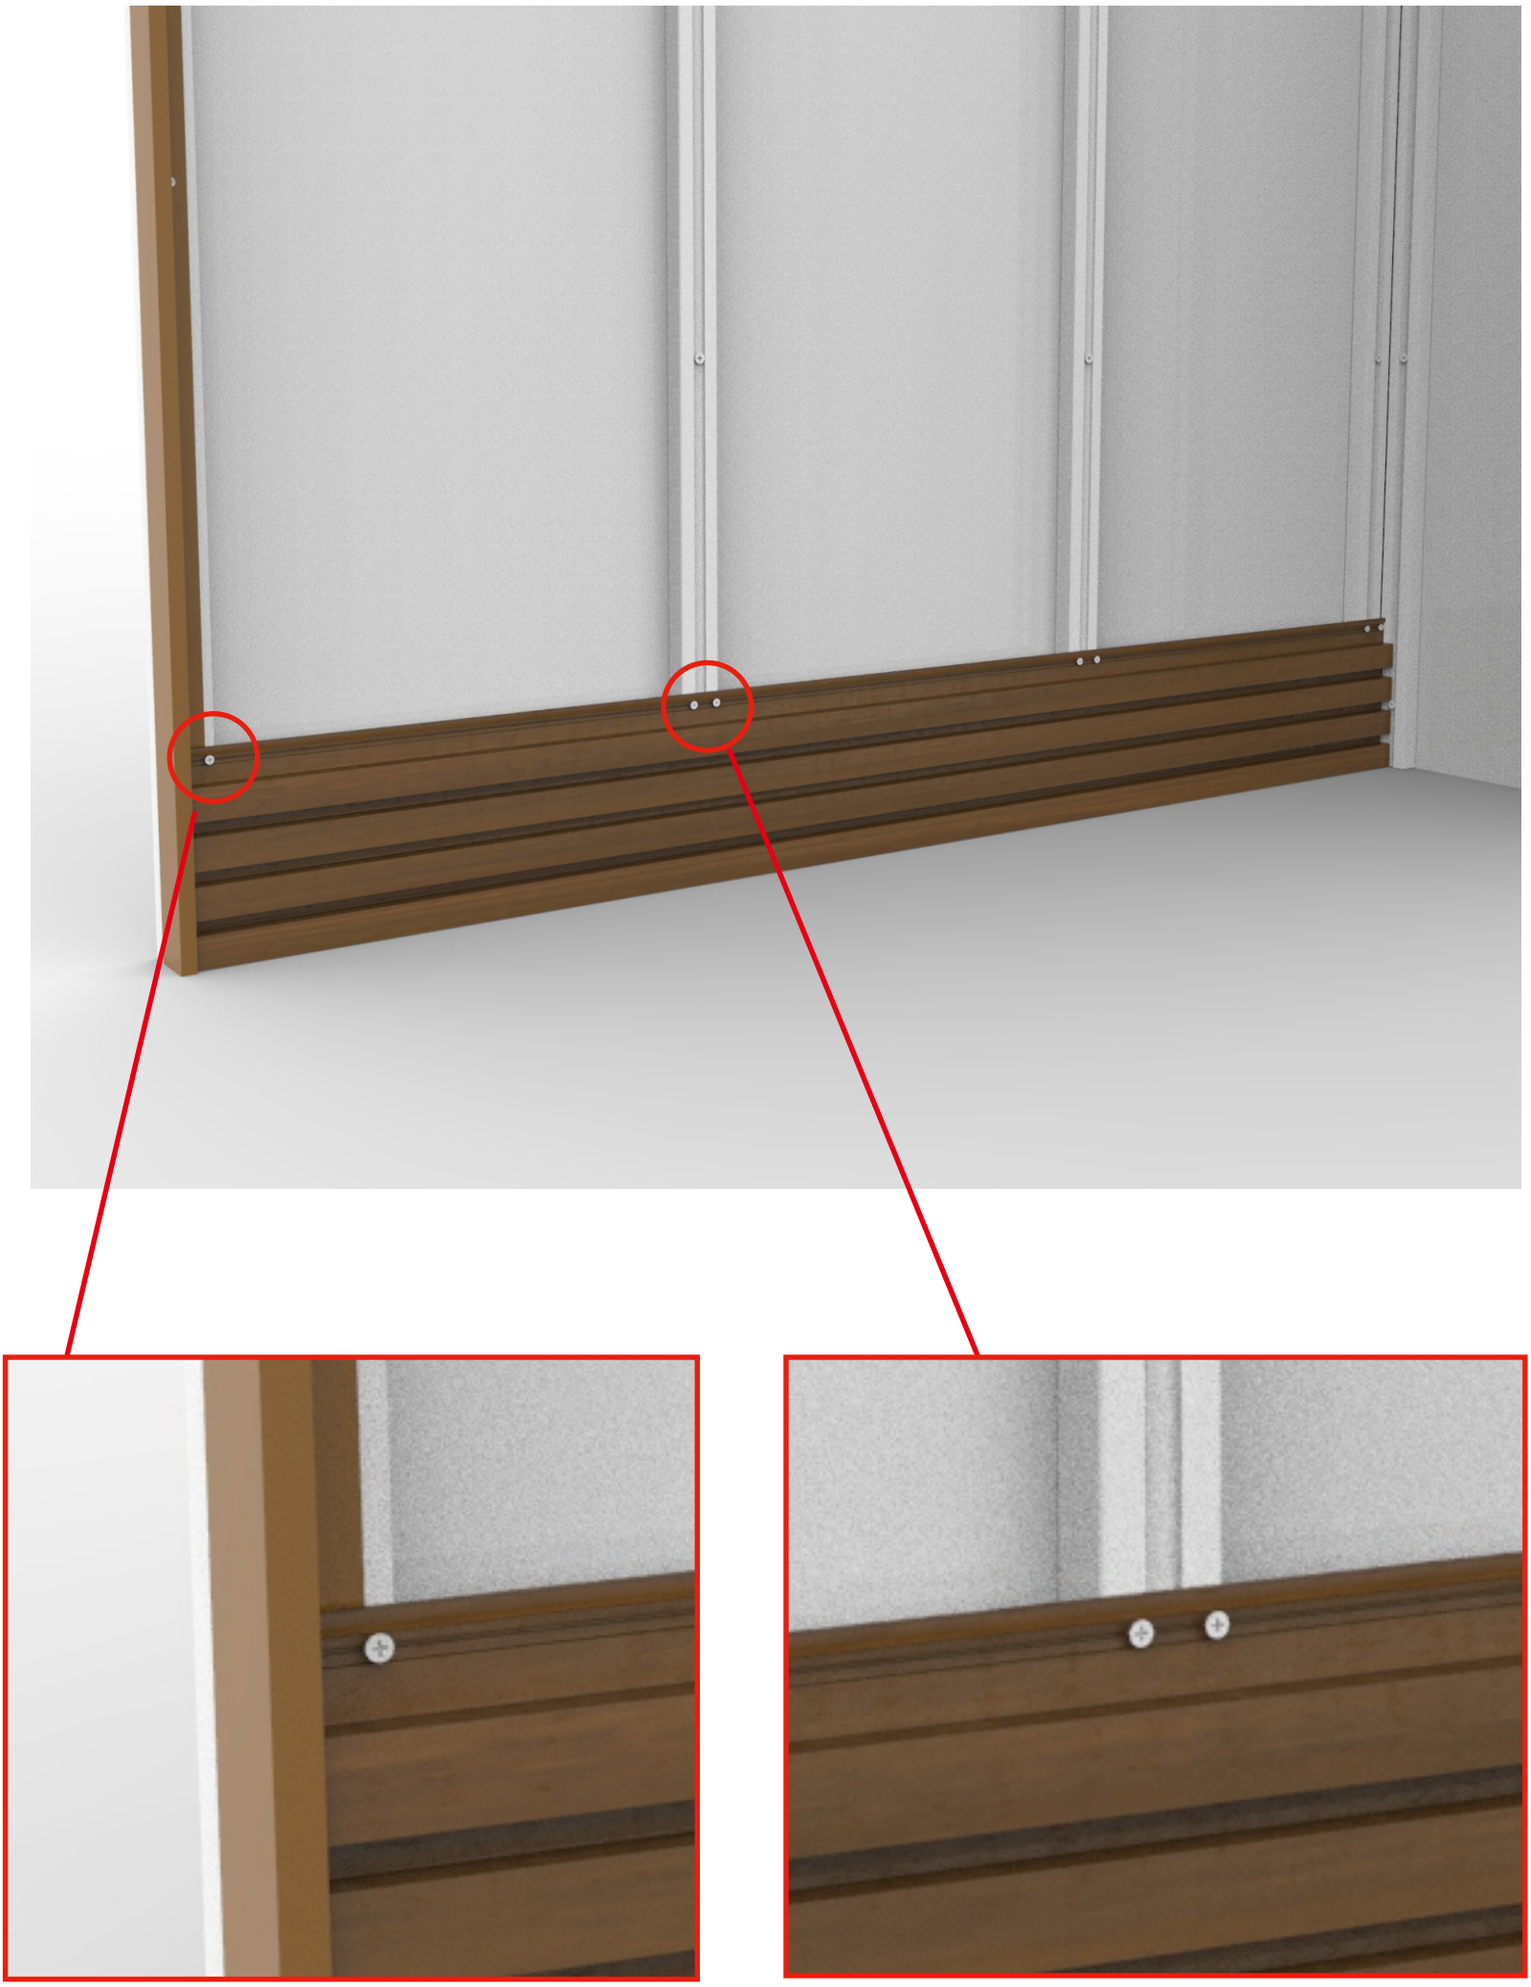

STEP 9 Internal Corner

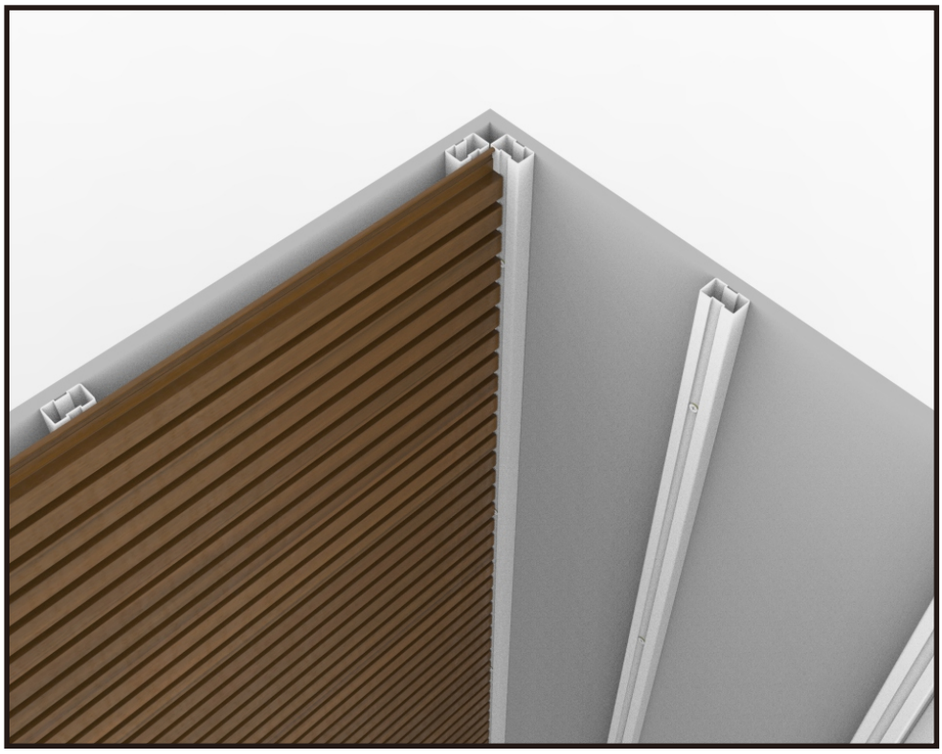

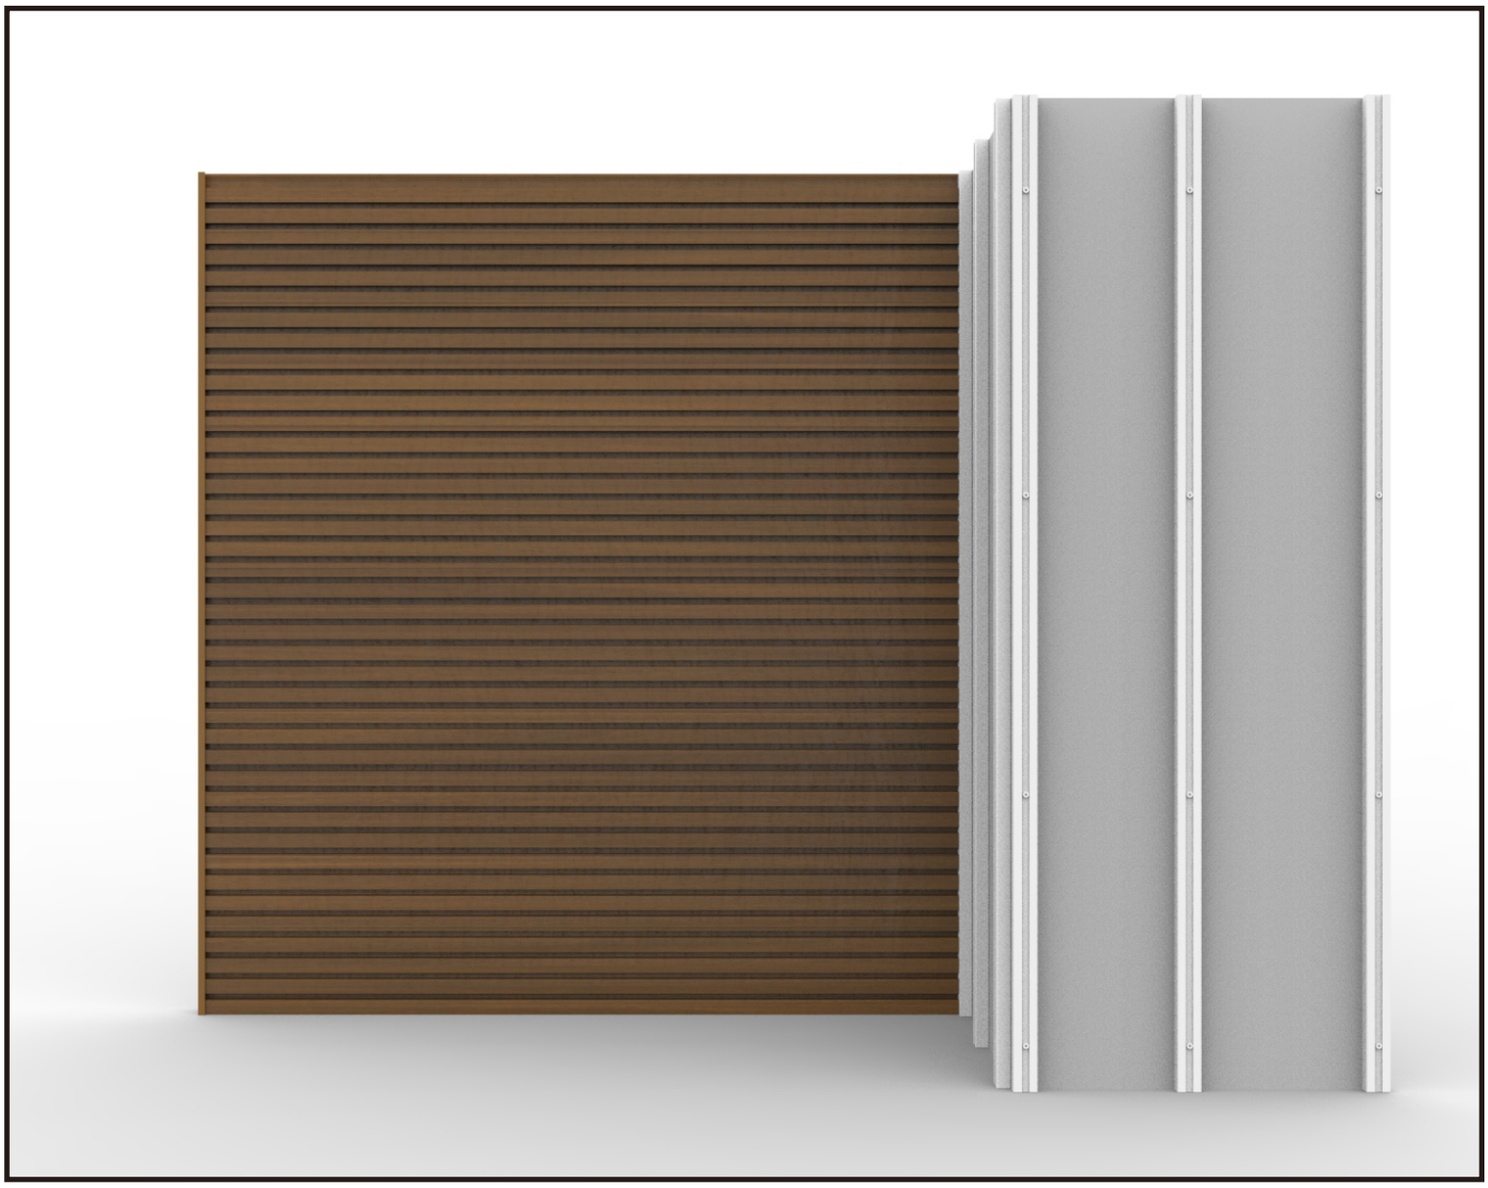

STEP 10 Fixing the external corner trim AC01

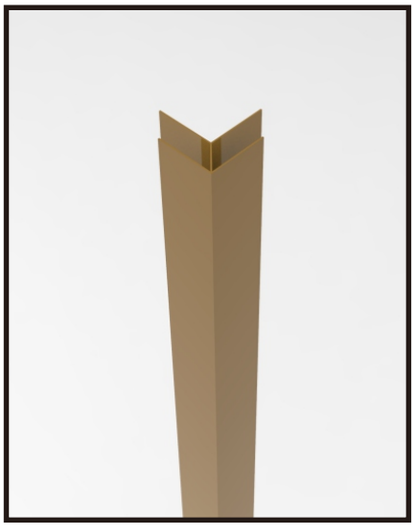

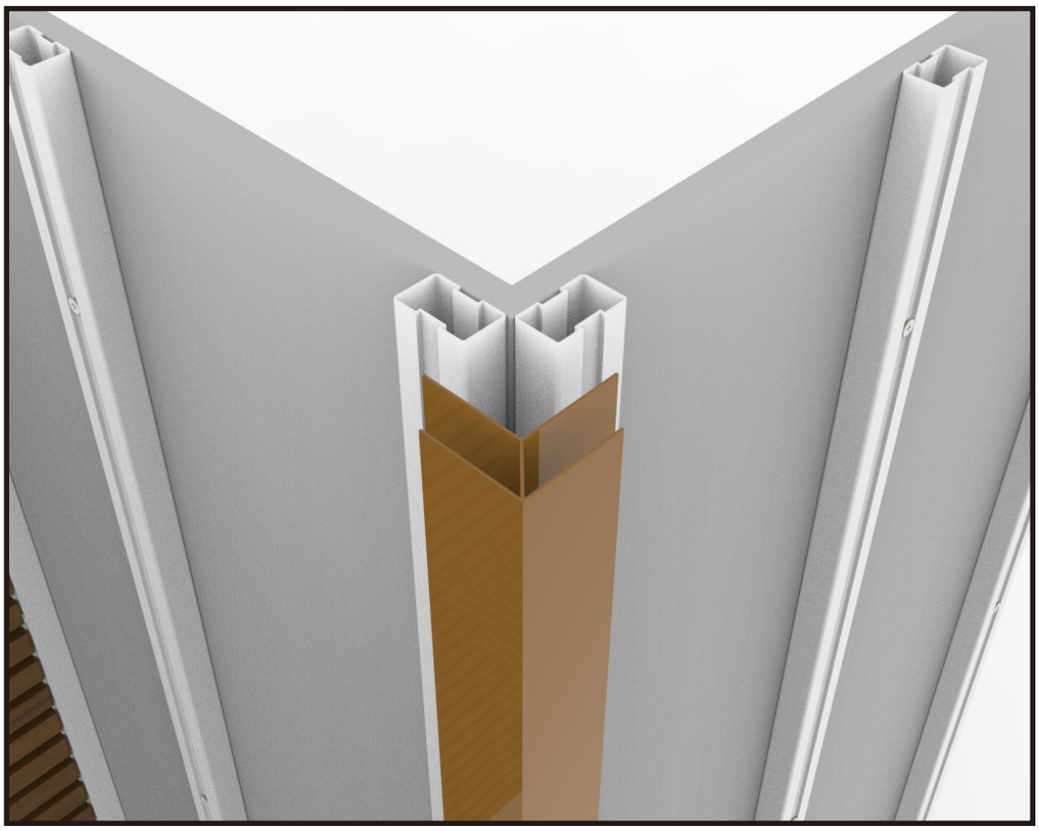

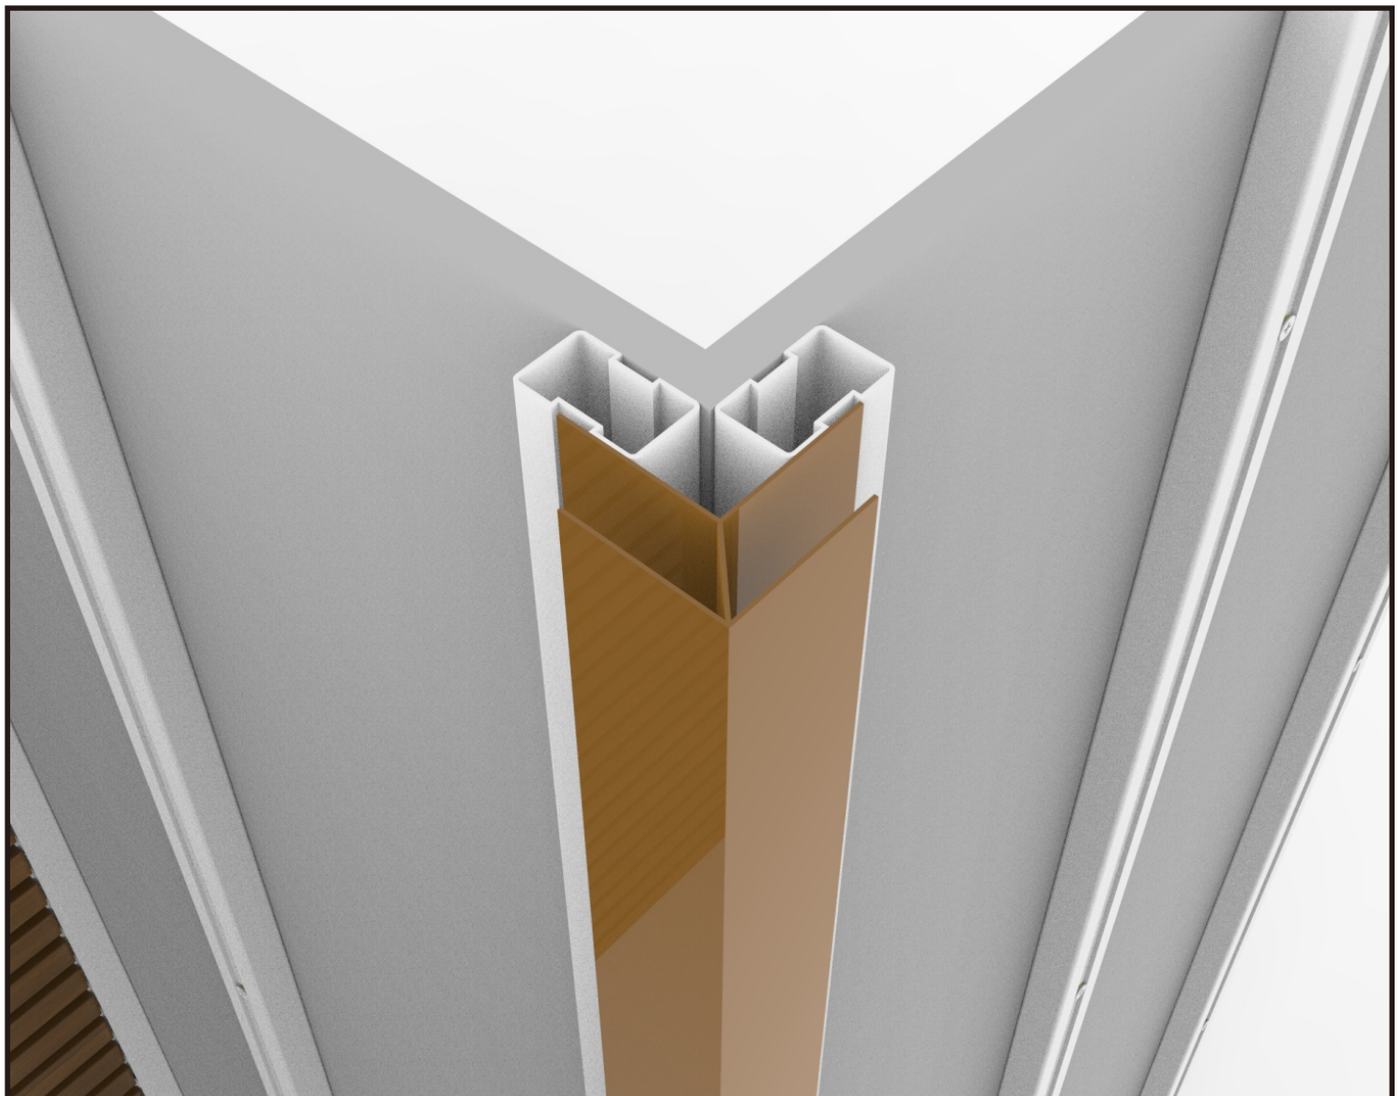

STEP 11 Fixing the external corner trim AC01

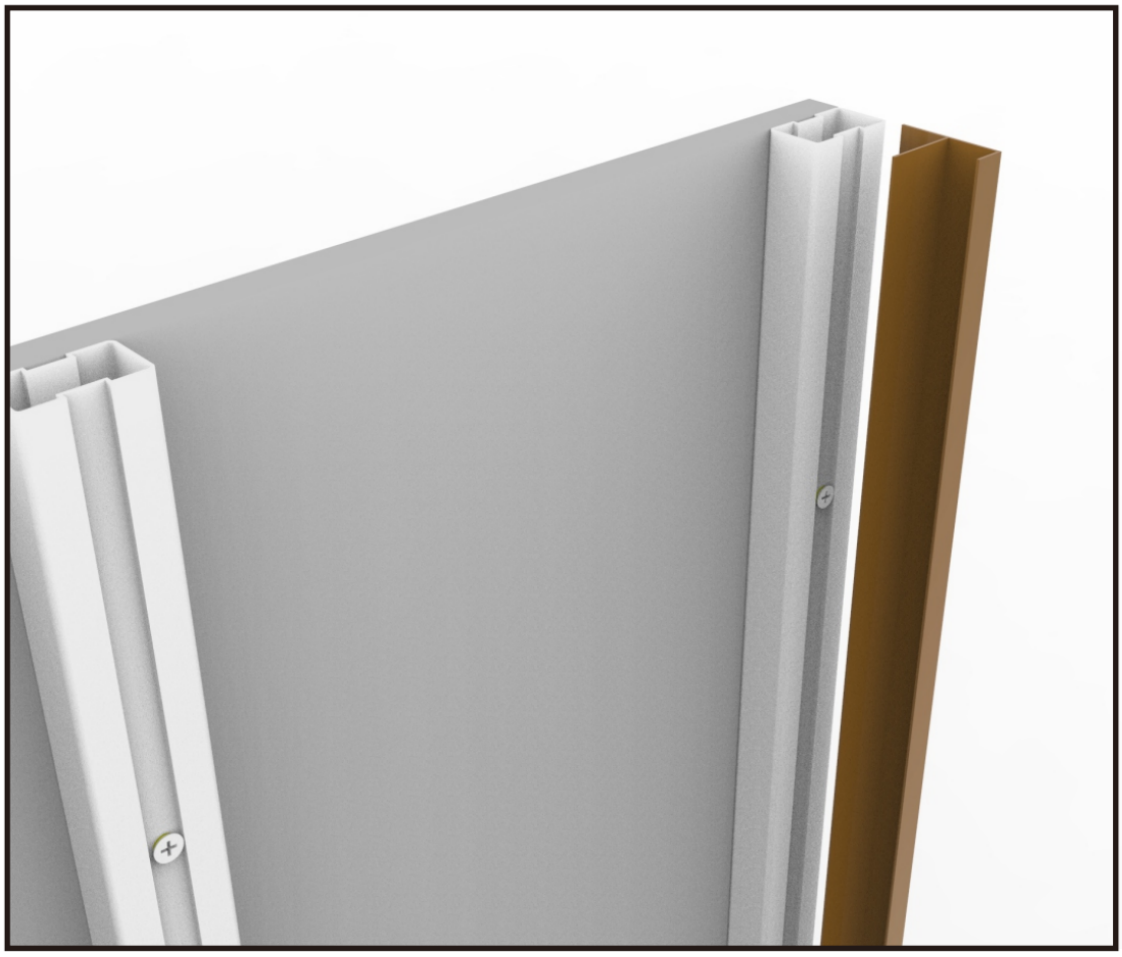

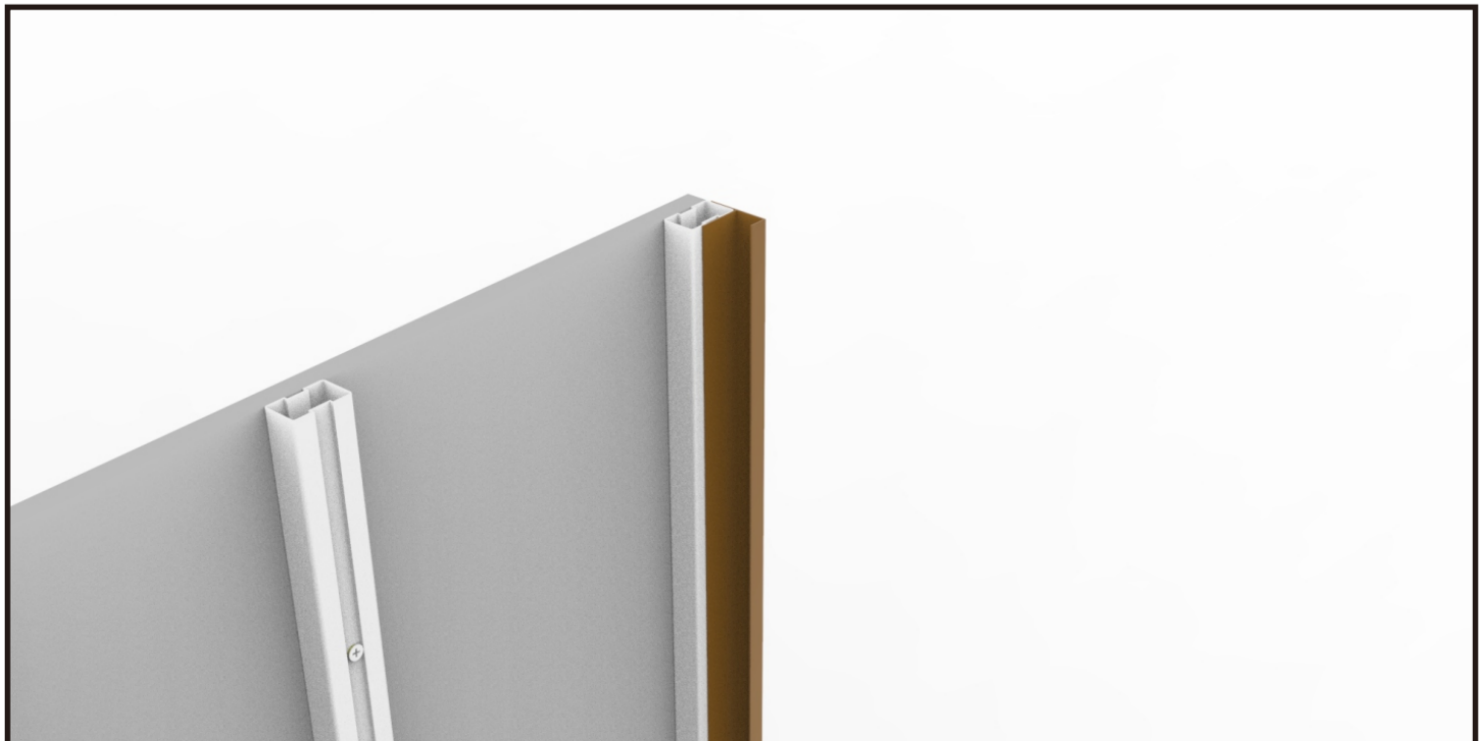

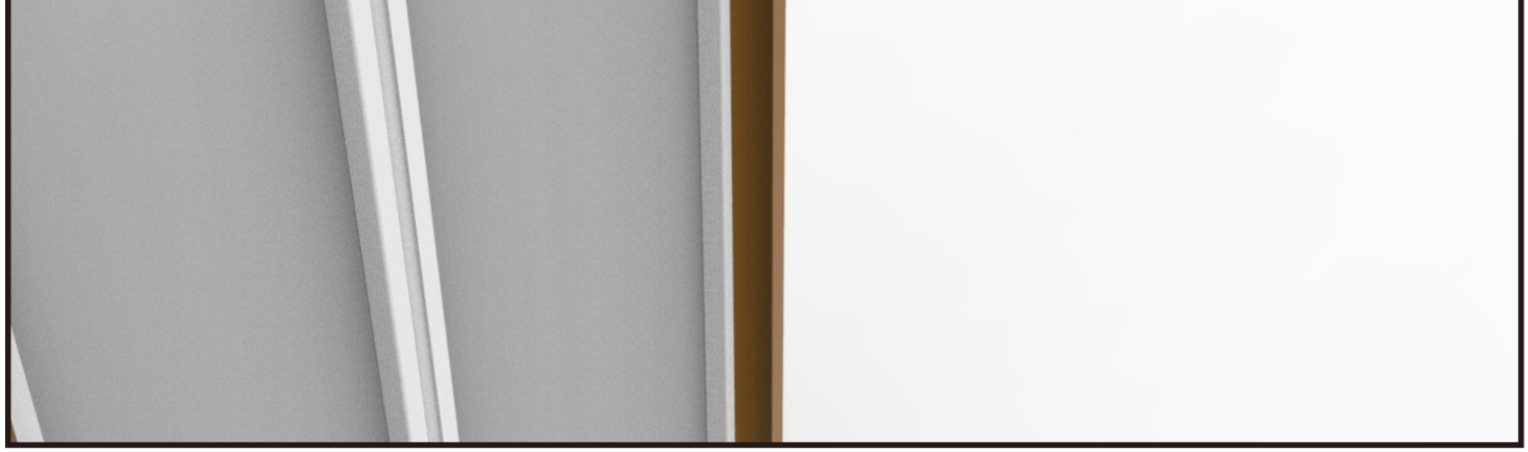

STEP 12 Fixing co-extrusion external corner trim SC01

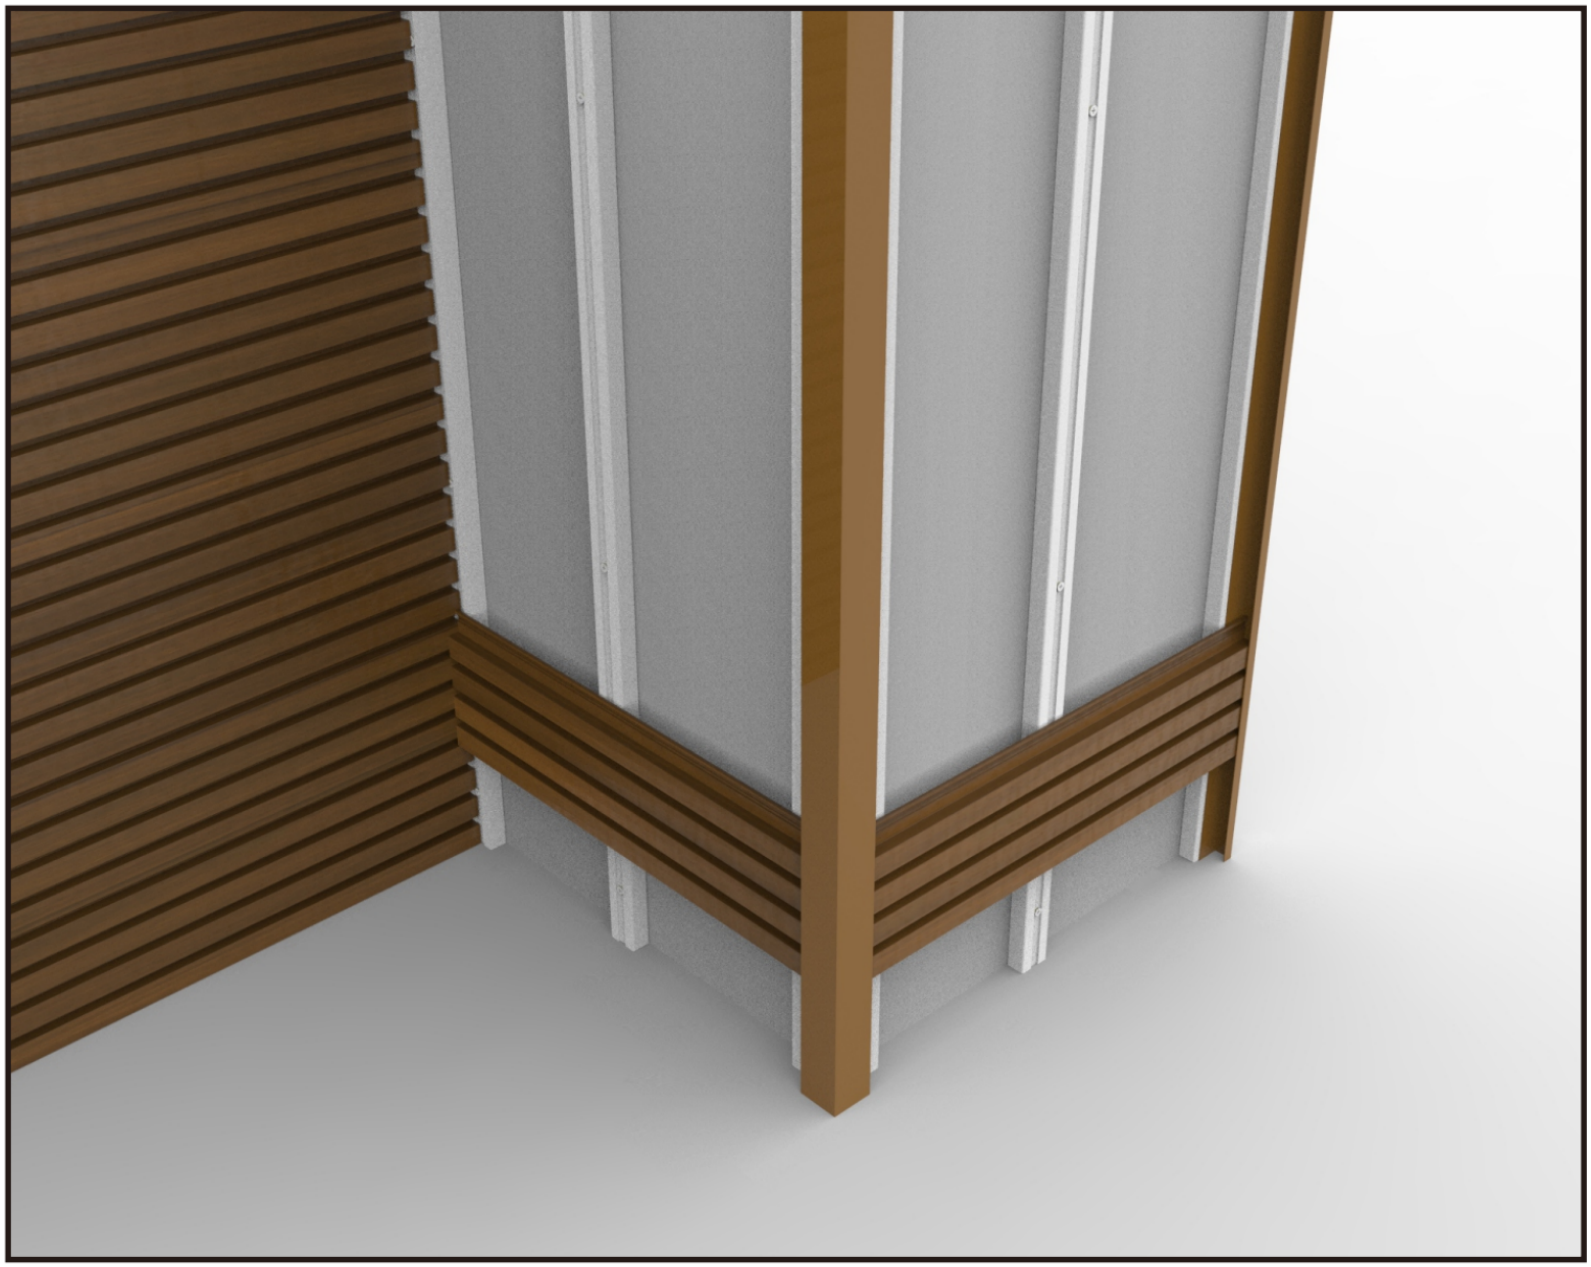

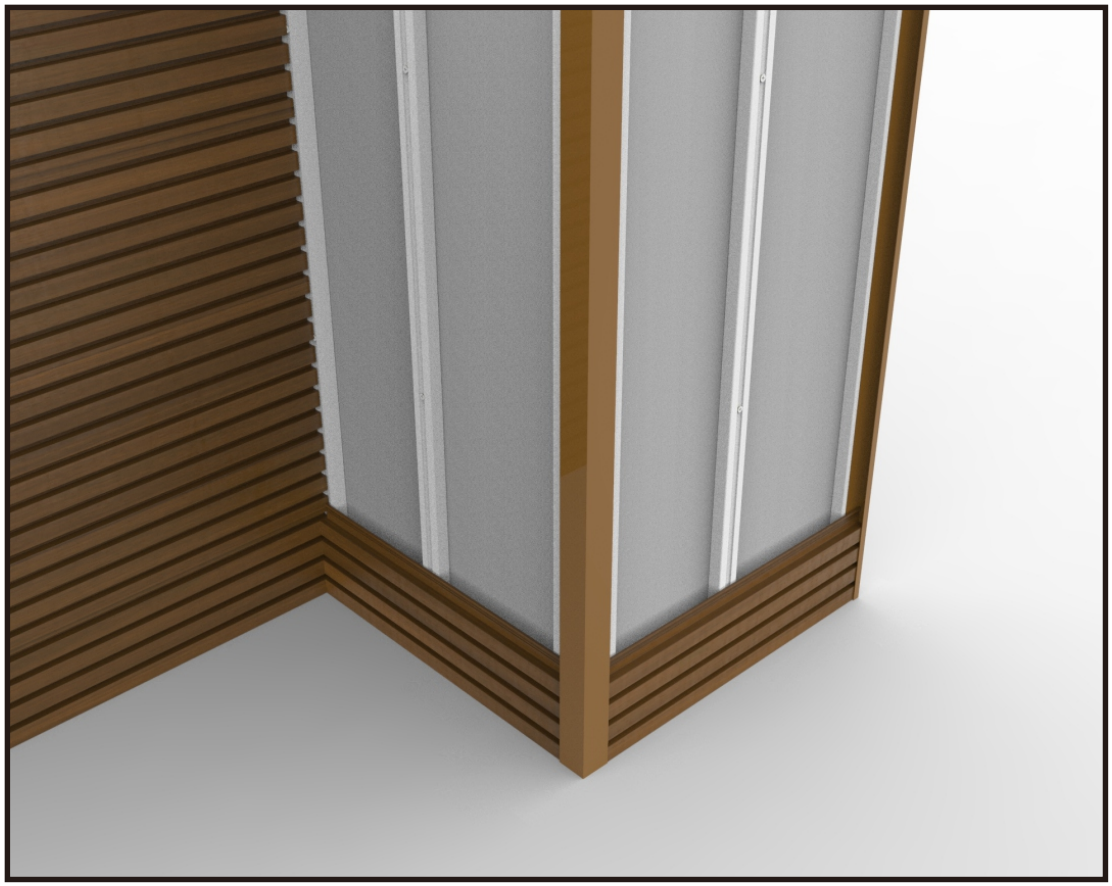
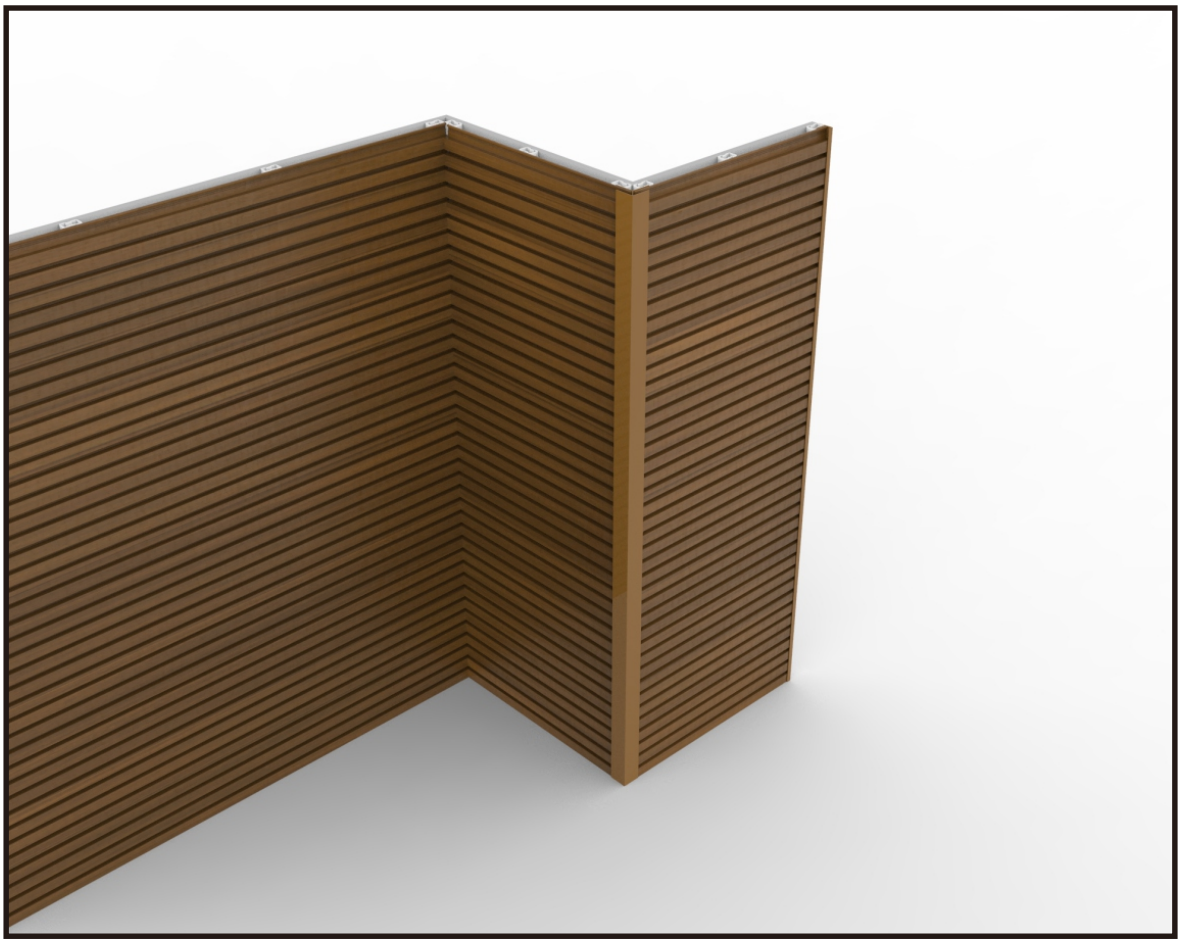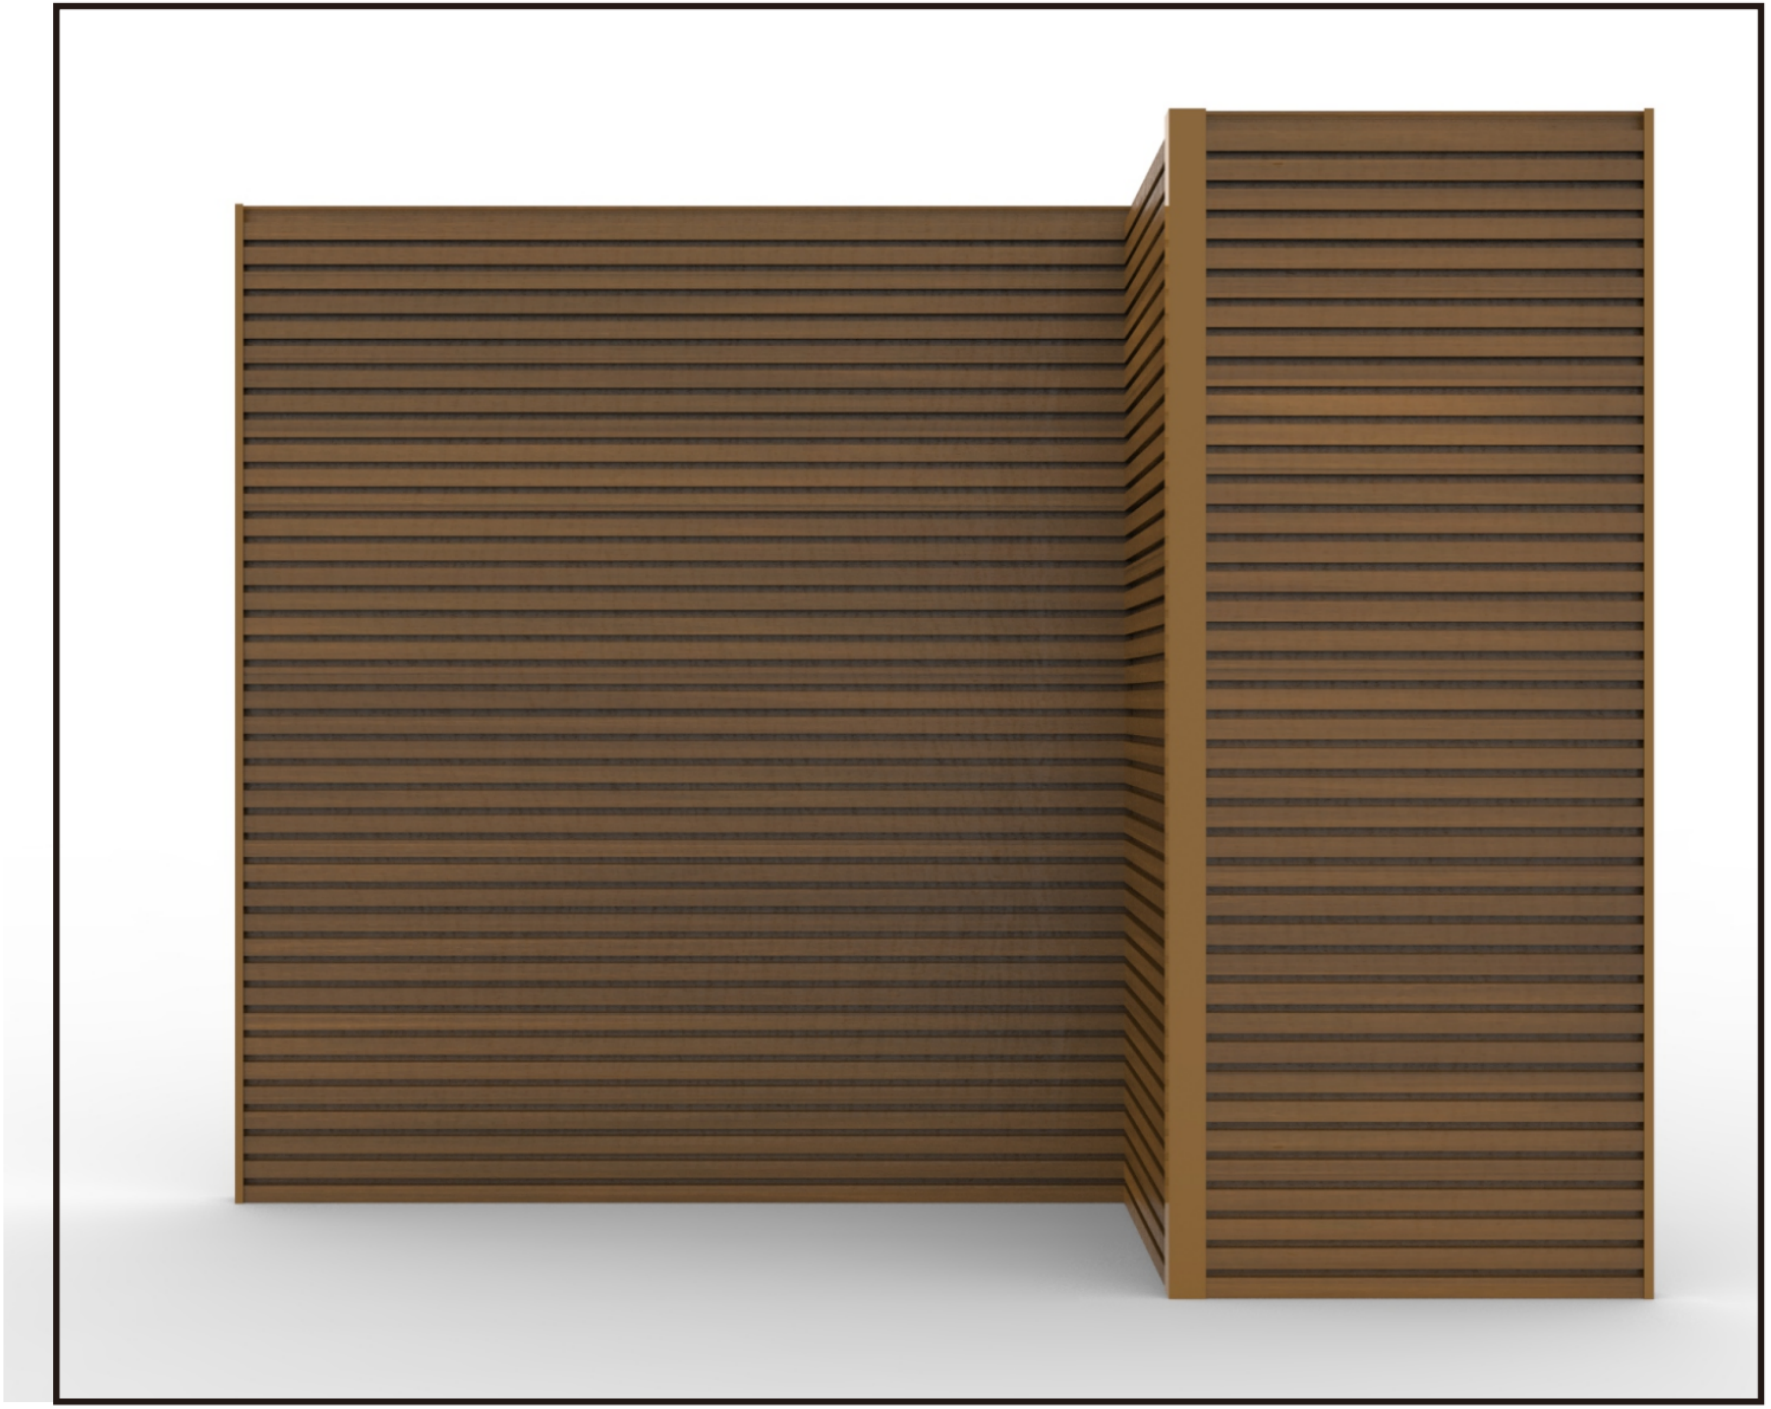
STEP 13 Fixing the external corner trim SC01